

SAEY

SAEY PEAK GAS CLOSED VERSION

EN - Installation and user manual



DoP N° 4001	PRESTATIEVERKLARING DÉCLARATION DE PERFORMANCE LEISTUNGSERKLÄRUNG																																																																			
Volgens Richtlijn 2009/142/EC		Selon Directive 2009/142/EC		Gemäß der Richtlinie 2009/142/EC																																																																
1/ Naam en identificatiecode		1/ Nom et code d'identification		1/ Name und Identifikationscode																																																																
SAEY PEAK GAS C.C.																																																																				
2/ Naam en adres fabrikant		2/ Nom et adresse de fabricant		2/ Name und Adresse der Fabrikant																																																																
		BELGOFIRE NV De Bruwaan 17 9700 Oudenaarde België																																																																		
3/ Het beoogde gebruik		3/ L' utilisation prévue		3/ Die vorgesehene Verwendung																																																																
Apparaat voor huishoudelijke verwarming, gestookt met aardgas of vloeibaar gas, zonder warmwaterproductie		Appareil de chauffage domestique alimenté aux gaz naturel ou gaz liquide, sans production d' eau chaude		Mit Erdgas oder Flüssiggas befeuerte Wärmeerzeuger für den Wohnbereich ohne Warmwasserbereitung																																																																
4/ Gecertificeerd laboratorium		4/ Laboratoire certifié		4/ Zertifizierte Prüfstelle																																																																
INTERTEK Testing & Certification		INTERTEK Testing & Certification		INTERTEK Testing & Certification																																																																
5/ Nummer van het keuringsrapport		5/ Numéro du rapport d' essai		5/ Nummer des Prüfberichts																																																																
103144355LHD-001		103144355LHD-001		103144355LHD-001																																																																
6/ Verklaarde prestaties		6/ Performances déclarées		6/ Erklärte Leistungen																																																																
Technische specificaties: 2009/142/EG		Specifications techniques: 2009/142/CE		Technische Spezifikationen: 2009/142/EG																																																																
		<table border="1" style="width: 100%; text-align: center;"> <tr> <th colspan="5">Aardgas/Gaz naturel/Erdgas</th> <th colspan="4">Vloeibaar gas/Gaz liquide/Flüssiggas/LPG</th> </tr> <tr> <td>Type gas</td> <td>G20</td> <td>G20-G25</td> <td>G25</td> <td>G25</td> <td>G30</td> <td>G31</td> <td>G31</td> <td>G30-G31</td> </tr> <tr> <td>Type de gaz</td> <td>I2H, I2E</td> <td>I2E+</td> <td>I2ELL</td> <td>I2L</td> <td>I3+</td> <td>I3P(30)</td> <td>I3P(37)</td> <td>I3B/P(30)</td> </tr> <tr> <td>Gas type</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>Vermogen inbreng (kW)</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>Puissance apportée (kW)</td> <td>11,5</td> <td>11,5 - 10,5</td> <td>9,4</td> <td>10,5</td> <td>10,5</td> <td>9,3</td> <td>10,5</td> <td>10,5</td> </tr> <tr> <td>Eingang Wärmeleistung (kW)</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table>		Aardgas/Gaz naturel/Erdgas					Vloeibaar gas/Gaz liquide/Flüssiggas/LPG				Type gas	G20	G20-G25	G25	G25	G30	G31	G31	G30-G31	Type de gaz	I2H, I2E	I2E+	I2ELL	I2L	I3+	I3P(30)	I3P(37)	I3B/P(30)	Gas type									Vermogen inbreng (kW)									Puissance apportée (kW)	11,5	11,5 - 10,5	9,4	10,5	10,5	9,3	10,5	10,5	Eingang Wärmeleistung (kW)										
Aardgas/Gaz naturel/Erdgas					Vloeibaar gas/Gaz liquide/Flüssiggas/LPG																																																															
Type gas	G20	G20-G25	G25	G25	G30	G31	G31	G30-G31																																																												
Type de gaz	I2H, I2E	I2E+	I2ELL	I2L	I3+	I3P(30)	I3P(37)	I3B/P(30)																																																												
Gas type																																																																				
Vermogen inbreng (kW)																																																																				
Puissance apportée (kW)	11,5	11,5 - 10,5	9,4	10,5	10,5	9,3	10,5	10,5																																																												
Eingang Wärmeleistung (kW)																																																																				
De bovenvermelde fabrikant houdt de documenten die deze prestaties bewijzen ter beschikking.		Le fabricant cité ci-dessus tient les documents prouvant ces performances à disposition.		Die oben genannte Fabrikant stellt die Dokumente die der Leistungen beweisen zur Verfügung.																																																																
Oudenaarde, 1 september 2017  Fabien De Vos Product Manager																																																																				
BELGOFIRE NV – De Bruwaan 17 – 9700 Oudenaarde (België) - www.belgofire.be																																																																				

PRODUCTKAART FICHE PRODUIT PRODUKTDATENBLATT	SAEY PEAK GAS C.C.																																																											
Productkaart volgens Verordening EU 2015/1186 Fiche produit selon la Réglementation UE 2015/1186 Produktdatenblatt gemäß der Verordnung EU 2015/1186 De informatie op de productkaart van het toestel voor lokale ruimteverwarming wordt in de onderstaande volgorde verstrekt en opgenomen in de productbrochure of andere schriftelijke informatie die samen met het product wordt geleverd. Les informations de la fiche de produit du dispositif de chauffage décentralisé sont fournies dans l'ordre indiqué ci-après et figurent dans la brochure relative au produit ou dans tout autre document fourni avec celui-ci. Die Angaben auf dem Produktdatenblatt des Einzelraumheizgerätes sind in nachstehender Reihenfolge aufzuführen und in die Produktbroschüre oder andere mit dem Produkt bereitgestellte Unterlagen aufzunehmen.																																																												
<table border="1"> <thead> <tr> <th data-bbox="293 862 869 896"></th> <th colspan="4" data-bbox="869 862 1284 896">SAEY PEAK GAS C.C.</th> </tr> <tr> <th data-bbox="293 896 869 974">De naam van de leverancier of het handelsmerk: Le nom du fournisseur ou la marque commerciale: Name oder Warenzeichen des Lieferanten:</th> <th colspan="4" data-bbox="869 896 1284 974">BELGOFIRE</th> </tr> <tr> <th data-bbox="293 974 869 1041">De type-aanduiding van het model van de leverancier: La référence du modèle donnée par le fournisseur: Modellkennung des Lieferanten:</th> <th data-bbox="869 974 973 1041">SAEY PEAK GAS C.C. G20</th> <th data-bbox="973 974 1077 1041">SAEY PEAK GAS C.C. G25</th> <th data-bbox="1077 974 1181 1041">SAEY PEAK GAS C.C. G30-G31</th> <th data-bbox="1181 974 1284 1041">SAEY PEAK GAS C.C. G31</th> </tr> <tr> <th data-bbox="293 1041 869 1108">Gassoort: Type de gaz: Art des Gases:</th> <th data-bbox="869 1041 973 1108">G20</th> <th data-bbox="973 1041 1077 1108">G25</th> <th data-bbox="1077 1041 1181 1108">G30 - G31 (30mbar)</th> <th data-bbox="1181 1041 1284 1108">G31 (37,5mbar)</th> </tr> <tr> <th data-bbox="293 1108 869 1176">De energie-efficiëntieklasse van het model: La classe d'efficacité énergétique du modèle: Energieeffizienzklasse des Modells:</th> <th data-bbox="869 1108 973 1176">A</th> <th data-bbox="973 1108 1077 1176">A</th> <th data-bbox="1077 1108 1181 1176">A</th> <th data-bbox="1181 1108 1284 1176">A</th> </tr> <tr> <th data-bbox="293 1176 869 1243">De directe warmteafgifte in kW: La puissance thermique directe en kW: Direkte Wärmeleistung in kW:</th> <th data-bbox="869 1176 973 1243">8,4</th> <th data-bbox="973 1176 1077 1243">8,4</th> <th data-bbox="1077 1176 1181 1243">7,9</th> <th data-bbox="1181 1176 1284 1243">7,9</th> </tr> <tr> <th data-bbox="293 1243 869 1310">De indirecte warmteafgifte in kW: La puissance thermique indirecte en kW: Indirekte Wärmeleistung in kW:</th> <th data-bbox="869 1243 973 1310">-</th> <th data-bbox="973 1243 1077 1310">-</th> <th data-bbox="1077 1243 1181 1310">-</th> <th data-bbox="1181 1243 1284 1310">-</th> </tr> <tr> <th data-bbox="293 1310 869 1377">De energie-efficiëntie-index EEI*: L'indice d'efficacité énergétique EEI*: Energieeffizienzindex EEI*:</th> <th data-bbox="869 1310 973 1377">89</th> <th data-bbox="973 1310 1077 1377">89</th> <th data-bbox="1077 1310 1181 1377">89</th> <th data-bbox="1181 1310 1284 1377">89</th> </tr> <tr> <th data-bbox="293 1377 869 1444">Het nuttig rendement bij nominale warmteafgifte (%): Le rendement utile à la puissance thermique nominale (%): Brennstoff-Energieeffizienz bei Nennwärmeleistung (%):</th> <th data-bbox="869 1377 973 1444">81,0</th> <th data-bbox="973 1377 1077 1444">81,0</th> <th data-bbox="1077 1377 1181 1444">82,0</th> <th data-bbox="1181 1377 1284 1444">82,0</th> </tr> <tr> <th data-bbox="293 1444 869 1512">Het nuttig rendement bij minimale warmteafgifte (%): Le rendement utile à la puissance thermique minimale (%): Brennstoff-Energieeffizienz bei Mindestlast (%):</th> <th data-bbox="869 1444 973 1512">-</th> <th data-bbox="973 1444 1077 1512">-</th> <th data-bbox="1077 1444 1181 1512">-</th> <th data-bbox="1181 1444 1284 1512">-</th> </tr> <tr> <th data-bbox="293 1512 869 1668">Specifieke maatregelen (voor de assemblage, de installatie en het onderhoud): Mesures spécifiques (lors de l'assemblage, de la maintenance et de l'entretien): Alle beim Zusammenbau, bei der Installation oder Wartung, zu treffenden besonderen Vorkehrungen:</th> <td colspan="4" data-bbox="869 1512 1284 1668"> zie handleiding voir le manuel siehe Bedienungsanleitung </td> </tr> </thead></table>							SAEY PEAK GAS C.C.				De naam van de leverancier of het handelsmerk: Le nom du fournisseur ou la marque commerciale: Name oder Warenzeichen des Lieferanten:	BELGOFIRE				De type-aanduiding van het model van de leverancier: La référence du modèle donnée par le fournisseur: Modellkennung des Lieferanten:	SAEY PEAK GAS C.C. G20	SAEY PEAK GAS C.C. G25	SAEY PEAK GAS C.C. G30-G31	SAEY PEAK GAS C.C. G31	Gassoort: Type de gaz: Art des Gases:	G20	G25	G30 - G31 (30mbar)	G31 (37,5mbar)	De energie-efficiëntieklasse van het model: La classe d'efficacité énergétique du modèle: Energieeffizienzklasse des Modells:	A	A	A	A	De directe warmteafgifte in kW: La puissance thermique directe en kW: Direkte Wärmeleistung in kW:	8,4	8,4	7,9	7,9	De indirecte warmteafgifte in kW: La puissance thermique indirecte en kW: Indirekte Wärmeleistung in kW:	-	-	-	-	De energie-efficiëntie-index EEI*: L'indice d'efficacité énergétique EEI*: Energieeffizienzindex EEI*:	89	89	89	89	Het nuttig rendement bij nominale warmteafgifte (%): Le rendement utile à la puissance thermique nominale (%): Brennstoff-Energieeffizienz bei Nennwärmeleistung (%):	81,0	81,0	82,0	82,0	Het nuttig rendement bij minimale warmteafgifte (%): Le rendement utile à la puissance thermique minimale (%): Brennstoff-Energieeffizienz bei Mindestlast (%):	-	-	-	-	Specifieke maatregelen (voor de assemblage, de installatie en het onderhoud): Mesures spécifiques (lors de l'assemblage, de la maintenance et de l'entretien): Alle beim Zusammenbau, bei der Installation oder Wartung, zu treffenden besonderen Vorkehrungen:	zie handleiding voir le manuel siehe Bedienungsanleitung			
	SAEY PEAK GAS C.C.																																																											
De naam van de leverancier of het handelsmerk: Le nom du fournisseur ou la marque commerciale: Name oder Warenzeichen des Lieferanten:	BELGOFIRE																																																											
De type-aanduiding van het model van de leverancier: La référence du modèle donnée par le fournisseur: Modellkennung des Lieferanten:	SAEY PEAK GAS C.C. G20	SAEY PEAK GAS C.C. G25	SAEY PEAK GAS C.C. G30-G31	SAEY PEAK GAS C.C. G31																																																								
Gassoort: Type de gaz: Art des Gases:	G20	G25	G30 - G31 (30mbar)	G31 (37,5mbar)																																																								
De energie-efficiëntieklasse van het model: La classe d'efficacité énergétique du modèle: Energieeffizienzklasse des Modells:	A	A	A	A																																																								
De directe warmteafgifte in kW: La puissance thermique directe en kW: Direkte Wärmeleistung in kW:	8,4	8,4	7,9	7,9																																																								
De indirecte warmteafgifte in kW: La puissance thermique indirecte en kW: Indirekte Wärmeleistung in kW:	-	-	-	-																																																								
De energie-efficiëntie-index EEI*: L'indice d'efficacité énergétique EEI*: Energieeffizienzindex EEI*:	89	89	89	89																																																								
Het nuttig rendement bij nominale warmteafgifte (%): Le rendement utile à la puissance thermique nominale (%): Brennstoff-Energieeffizienz bei Nennwärmeleistung (%):	81,0	81,0	82,0	82,0																																																								
Het nuttig rendement bij minimale warmteafgifte (%): Le rendement utile à la puissance thermique minimale (%): Brennstoff-Energieeffizienz bei Mindestlast (%):	-	-	-	-																																																								
Specifieke maatregelen (voor de assemblage, de installatie en het onderhoud): Mesures spécifiques (lors de l'assemblage, de la maintenance et de l'entretien): Alle beim Zusammenbau, bei der Installation oder Wartung, zu treffenden besonderen Vorkehrungen:	zie handleiding voir le manuel siehe Bedienungsanleitung																																																											
*EEI en energie-efficiëntie index zijn gebaseerd op waarden gemeten bij een lange kanaalconfiguratie. BELGOFIRE NV – De Bruwaan 17 – 9700 Oudenaarde (België)																																																												

CONTENTS

1	INTRODUCTION.....	5
2	USER INSTRUCTIONS.....	6
2.1	Emergency Gas Isolation.....	6
2.2	First Time of Operation.....	6
2.3	Control Overview.....	6
2.4	Manual Turn OFF	14
2.5	Cleaning and Maintenance.....	14
3	INSTALLATION INSTRUCTIONS.....	15
3.1	Gas Connection	15
3.2	Ventilation	15
3.3	Appliance Fireplace Installation	15
3.4	Flue Connection	16
3.5	Fuel Bed Arrangements.....	31
3.6	Commissioning the Appliance	35
4	SERVICING.....	36
4.1	Cleaning the Ceramics	36
4.2	Servicing the Burners.....	36
4.3	Spare parts	37
5	TECHNICAL INFORMATION.....	38
5.1	Countries of Use.....	38
5.2	Technical Data.....	39
5.3	Dimensions.....	40

I INTRODUCTION

This Saey gas appliance is a High Efficiency, Balanced Flue Live Fuel Effect appliance. It provides radiant and convected heat using the latest burner technology. As well as having a variable heat output, these fires also utilise a special control system that allows the appliance to use three burners for high output or a single burner for lower outputs.

One of the burners will be designated as the "Main" Burner, this is the Centre, the second and third burners will be designated as the "Effect" Burners. The Effect burners can be switched ON or Off whilst the appliance is alight.

Before Installation, check that the local distribution conditions, nature of the gas and pressure, and adjustment of the appliance are compatible.

This appliance is intended for use on a gas installation with a governed meter.

This Gas Installation **may only be installed by a registered professional competent person (Gas Safe installer in the UK)**. The installation must adhere to the requirements of the local and national Building regulations and national standards. The installation manual must also be followed.

Ensure that the Flue Terminal is not in any way obstructed and is clear of vegetation, i.e. trees, shrubs etc. and that no objects are leant against the terminal or guard.

Always clean the Window Panel before the fire is ignited. Any finger prints must be removed, as these will be burnt into the glass and will be un-removable.

Do not operate this appliance if the glass panel has been broken (or cracked), removed or is open.

The appliance is designed to fit numerous installation situations as listed in these installation instructions. However only flue approved by Saey for this appliance may be used.

This appliance is a balanced flue product and is room sealed and as such requires no additional ventilation for operation. However an adequate supply of fresh air to maintain temperatures and a comfortable environment is recommended.

This appliance is designed as a heating appliance, and as such will get very hot in operation; all surfaces (except the controls and access door) are considered to be working surfaces and as such should not be touched. The front windows and surrounds are not considered to be fully secure guards against accidental contact. It is recommended that an approved fire screen be used if children, the elderly or persons with limited mobility are to be present in the same area.

Do not place curtains, laundry, furniture etc. within a safe distance of 300mm of this appliance.

Do not attempt to burn rubbish on this appliance.

If this appliance is extinguished, on purpose or other, no attempt to relight should be made within 3 minutes.

Flue Systems

Saey products are approved for use with the following Flue Systems (inc. types C11, C31 and C91):

Flexinox (Thermo Products BV) Thermovent Con.

Metaloterm US.

Muelink & Grol (M&G) Concentric.

Poujoulat PGI.

Jeremias TWG (System TWIN-GAS).

2 USER INSTRUCTIONS.

2.1 Emergency Gas Isolation

In the event of a gas leak or if gas is smelt, the appliance must be isolated. This is done by turning OFF the gas at the Isolation Tap. This Isolation Tap is located in the foot of the appliance.

2.2 First Time of Operation

Before igniting the appliance, ensure that all packaging, safety stickers and any protective wrapping have been removed, and that the glass has been cleaned, including all fingerprints from the glass.

Ensure that the room is adequately ventilated the first time that the appliance is ignited; we would recommend opening windows if possible. Run the appliance at full setting for a few hours so that the paint gets an opportunity to fully cure. During this period it is possible for some fumes and vapours to be given off. We would recommend keeping children and pets out of the area at this time.

2.3 Control Overview

2.3.1 Basic Manual Control

a) Igniting the Pilot Light

1. From the OFF position, depress the control knob for five seconds (only pilot gas flows).
2. Turn the control knob anti-clockwise through the PILOT position and continue turning until the igniter “clicks”, if the Pilot flame lights, hold for ten seconds (only pilot gas flows). If the Pilot has not Ignited, return the control knob to the OFF position and repeat.



3. Upon releasing the control knob the pilot flame should remain alight, if not return the control knob to the OFF position and repeat.

b) Igniting the Main Burner

The appliance should always be run on FULL for the first 30 seconds.

From the IGNITION position, turn the control knob fully anti-clockwise, this is the FULL position, gas should now be flowing to the main burner and the burner should light on full.



c) Adjusting the Flame Height (heat setting)

From the FULL position, turn the control clock-wise, until the control knob reaches a stop, this is the LOW setting. Any position between HIGH and LOW can be selected as an intermediate setting.



d) Leaving the appliance in Pilot Position

In the Pilot Position, only the Pilot flame will remain alight.

Depress and turn the control clockwise, through the LOW setting to the PILOT setting.



The appliance can be left in this position, however we would recommend turning the appliance OFF if not required within a few hours.

e) Turning the appliance OFF

From any heat setting or PILOT, Depress and turn the Control knob fully clockwise to reach the OFF position, and release the control knob. The appliance will now be OFF.



2.3.2 Remote Control

OPERATING INSTRUCTIONS

GENERAL NOTES

NOTICE

Wiring of valve and receiver must be completed before starting ignition. Failure to do so could damage the electronics.

Batteries – Handset

- Low battery indicator on handsets.

Batteries – Receiver

- Low battery indication: frequent beeps for 3 seconds when motor turns.
- An AC Mains Adapter may be used instead of batteries.
- The module for fan speed control and light/dimmer includes mains power together with batteries in the receiver for automatic backup in case of power outage.

⚠ WARNING

- Without using a mains adapter, battery replacement is recommended at the beginning of each heating season.
- Old or dead batteries should be removed immediately. If left in the unit the batteries can overheat, leak, and/or explode.
- Do NOT expose batteries (including during storage) to direct sunlight, excessive heat, fire, moisture, or severe impact. Each of these conditions can cause the batteries to overheat, leak, and/or explode.
- New and old batteries and different brands of batteries should not be used together. Mixing of various batteries can cause the batteries to overheat, leak, and/or explode.

Software Version

Press  and  buttons simultaneously. Software version is displayed.

Handset Model Number

Press  and  buttons simultaneously. Handset model number is displayed.

Deactivate Functions

1. Install batteries. All icons are displayed and flashing.
2. While the icons are flashing, press the relevant function button and hold for 10 sec.
3. The function icon will flash until deactivation is complete. Deactivation is complete when the function icon and two horizontal bars are displayed.

NOTE: If a deactivated button is pressed, there is no function, and two horizontal bars are displayed.

NOTE: Deactivation remains in effect after change of batteries.

Activate Functions

1. Install batteries. All icons are displayed and flashing.
2. To activate a function, press the relevant button and hold for 10 sec.
3. The function icon will continue to flash until activation is complete. Activation is complete when the function icon is displayed.

The following Functions can be Deactivated/Activated

- CHILD PROOF
- PROGRAM MODE
- THERMOSTATIC MODE (also deactivates PROGRAM MODE)
- ECO MODE

- LIGHT/DIMMER OPERATION
- CIRCULATING FAN OPERATION
- AUXILIARY FEATURE
- COUNTDOWN TIMER

SETTING THE ELECTRONIC CODE

(First time use only.)

Radio Frequency Handset

A code is selected automatically for all Mertik Maxitrol electronics from among 65,000 codes available. The receiver must be paired with the handset.

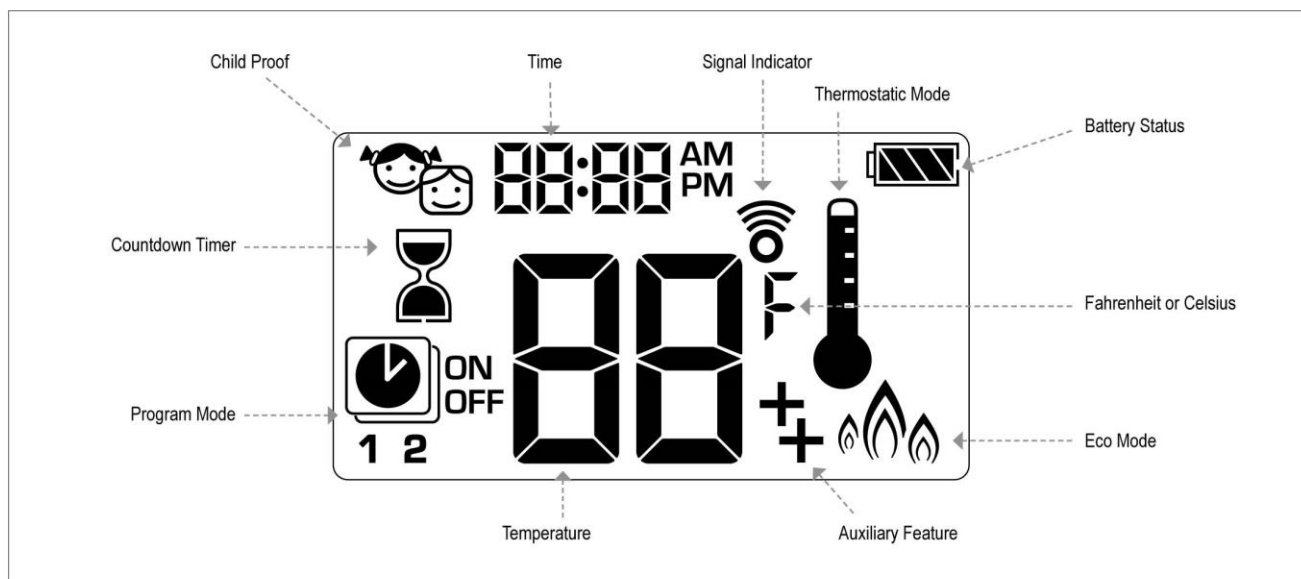


Figure 20: 8-symbol Display

SETTING FAHRENHEIT or CELSIUS



To change between °C and °F, press and buttons simultaneously.

NOTE: Choosing °F results in a 12 hour clock. Choosing °C results in a 24 hour clock.

CHILD PROOF



ON:
To activate press and buttons simultaneously. displayed and the handset is rendered inoperable, except for the off function.

OFF:
To deactivate press and buttons simultaneously. disappears.

SETTING the TIME



1. Press and buttons simultaneously. **Day** flashes.
2. Press or button to select a number to correspond with the day of the week (e.g. 1=Monday, 2=Tuesday, 3=Wednesday, 4=Thursday, 5=Friday, 6=Saturday, 7=Sunday).
3. Press and buttons simultaneously. **Hour** flashes.
4. To select hour press or button.
5. Press and buttons simultaneously. **Minutes** flash.
6. To select minutes press or button.
7. To confirm press and buttons simultaneously or wait.

MANUAL MODE (HANDSET)

NOTICE


BEFORE OPERATING

1. Make sure MANUAL knob on the GV60 valve is in the **ON**, full counterclockwise position.
2. Place the ON/OFF switch (if equipped) in the **I (ON)** position.

TO TURN ON FIRE

▲ WARNING

When pilot ignition is confirmed, motor turns automatically to maximum flame height.

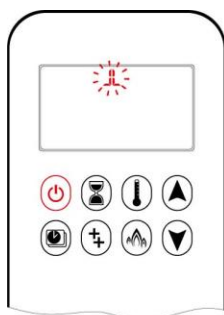


Handset One-Button Operation

(Default Setting)

- Press button until two short beeps and a blinking series of lines confirms the start sequence has begun; release button.
- Main gas flows once pilot ignition is confirmed.
- Handset automatically goes into Manual Mode after main burner ignition.

NOTICE

Change from one-button to two-button ignition operation by pressing and holding button for 10 sec. immediately after installing batteries. **ON** is displayed and **1** is flashing. When change is complete **1** will change to **2**.

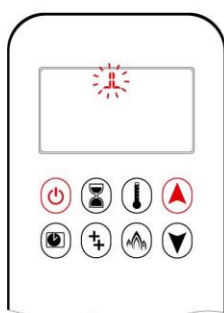

Handset Two-Button Operation

- Press and button simultaneously until two short beeps and a blinking series of lines confirms the start sequence has begun; release buttons.
- Main gas flows once pilot ignition is confirmed.
- Handset automatically goes into Manual Mode after main burner ignition.

NOTICE

Change from two-button to one-button ignition operation by pressing and holding button for 10 sec. immediately after installing batteries. **ON** is displayed and **2** is flashing. When change is complete **2** will change to **1**.

▲ WARNING

If the pilot does not stay lit after several tries, turn the main valve knob to **OFF** and follow the instructions "TURN OFF GAS TO APPLIANCE" (page 19).

STANDBY MODE (PILOT FLAME)

Handset

- Press and hold button to set appliance to pilot flame.

TO TURN OFF FIRE



Handset

- Press button to turn OFF.

NOTE: There is a 5 sec delay before the next ignition is possible.

FLAME HEIGHT ADJUSTMENT



Handset

- To increase flame height press and hold button.
- To decrease flame height or to set appliance to pilot flame, press and hold button.

DESIGNATED LOW FIRE and HIGH FIRE

NOTE: Backlight must be on for high fire and low fire double-click operation.



- To go to low fire, double-click button. **LO** is displayed.

NOTE: Flame goes to high fire first before going to low fire.



- To go to high fire, double-click button. **HI** is displayed.

▲ WARNING

If the appliance will not operate, follow the instructions "TURN OFF GAS TO APPLIANCE" (page 19).

COUNTDOWN TIMER



ON/SETTING:

1. Press and hold button until displayed, and **hour** flashes.
2. To select hour press or button.
3. To confirm press button. **Minutes** flash.
4. To select minutes press or button.
5. To confirm press button or wait.

OFF:

Press button, and countdown time disappear.


NOTE: At end of countdown time period, the fire turns off. The Countdown Timer only works in Manual, Thermostatic, and Eco Modes. Maximum countdown time is 9 hours and 50 minutes.

MODES of OPERATION



Thermostatic Mode

The room temperature is measured and compared to the set temperature. The flame height is then automatically adjusted to achieve the set temperature.

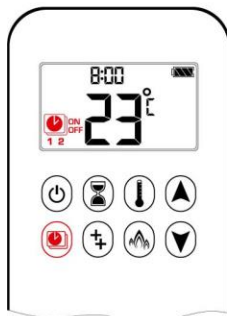

Program Mode

PROGRAMS 1 and 2, each can be programmed to go on and off at specific times at a set temperature.



Eco Mode

Flame height modulates between high and low. If the room temperature is lower than the set temperature, the flame height stays on high for a longer period of time. If the room temperature is higher than the set temperature, the flame height stays on low for a longer period of time. One cycle lasts approx. 20 min.

THERMOSTATIC MODE



ON:

Press button. displayed, preset temperature displayed briefly, and then room temperature displayed.

OFF:

1. Press .
2. Press or button to enter Manual Mode.
3. Press button to enter Program Mode.
4. Press button to enter Eco Mode.



SETTING:

1. Press button and hold until displayed, temperature flashes.
2. To adjust set temperature press or .
3. To confirm press button or wait.

PROGRAM MODE



ON:

Press button. , 1 or 2, ON or OFF displayed.



OFF:

1. Press or button to enter Manual Mode.
2. Press button to enter Thermostatic Mode.

NOTE: The set temperature for Thermostatic Mode is the temperature for the on time in Program Mode. Changing the Thermostatic Mode set temperature also changes the on time temperature in Program Mode.

Default settings:

ON TIME (Thermostatic) TEMPERATURE: 21 °C (70 °F)


OFF TIME TEMPERATURE: “—” (pilot flame only)



TEMPERATURE SETTING:

1. Press button and hold until flashes. ON and set temperature (setting in Thermostatic Mode) displayed.
2. To continue press button or wait. , OFF displayed, temperature flashes.
3. Select off temperature by pressing the or .
4. To confirm press button.


NOTE: The on (Thermostatic) and off set temperatures are the same for each day.

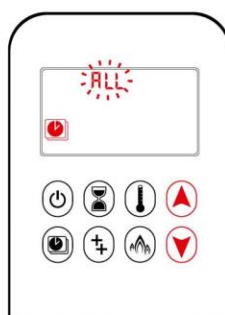

DAY SETTING:


5. ALL flashes. Press or button to choose between ALL, SAT, 1, 2, 3, 4, 5, 6, 7.
6. To confirm press button.

RLL selected

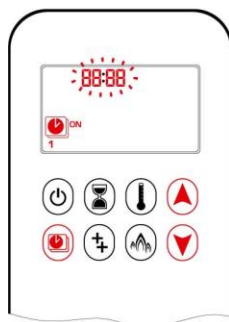

ON TIME SETTING (PROGRAM 1):

7. **1, ON** displayed, RLL is displayed shortly, and **hour** flashes.
8. To select hour press or button.
9. To confirm press button. **1, ON** displayed, RLL displayed shortly, and **minutes** flash.
10. To select minutes press or button.
11. To confirm press button.

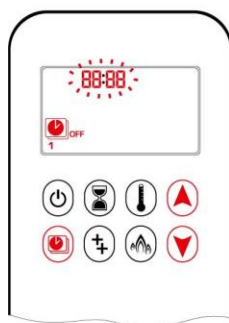

OFF TIME SETTING (PROGRAM 1):

12. **1, OFF** displayed, RLL is displayed shortly, and **hour** flashes.
13. To select hour, press or button.
14. To confirm press button. **1, OFF** displayed, RLL displayed shortly, and **minutes** flash.
15. To select minutes press or button.
16. To confirm press button.

NOTE: Either continue to PROGRAM 2 and set on and off times or stop programming at this point, and PROGRAM 2 remains deactivated.

NOTE: PROGRAM 1 and 2 use the same on (Thermostatic) and off temperatures for RLL, SR5U and Daily Timer (1, 2, 3, 4, 5, 6, 7). Once a new on (Thermostatic) and/or off temperature has been set, that temperature becomes the new default setting.

NOTE: If RLL, SR5U or Daily Timer are programmed for PROGRAM 1 and PROGRAM 2 on and off times, these become the new default times. The batteries must be removed to clear the PROGRAM 1 and PROGRAM 2 on and off times and temperatures.

SR5U or Daily Timer (1, 2, 3, 4, 5, 6, 7) selected

- Set on time and off time using same procedure as "RLL selected" (above).
- SR5U: Set on time and off time for both Saturday and Sunday.
- Daily Timer: Unique on and off times may be set for a single day of the week, for multiple days of the week, or for every day of the week.
- Wait to finish setting.

AUXILIARY FEATURE

Upon ignition burner 1 is on and burner 2 is in the last setting.



ON:


To switch a burner on, press the button. displayed.

OFF:

To switch the burner OFF, press the button. disappears.

NOTE: The latching solenoid valve cannot operate manually. If the receiver battery runs down it will remain in the last operating position.

ECO MODE

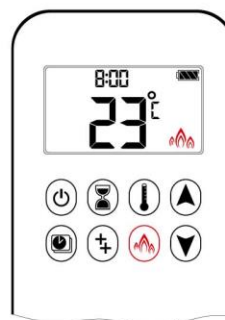

ON:

Press button to enter Eco Mode. displayed.


OFF:

Press button. disappears.

2.4 Manual Turn OFF

In the event that the appliance needs to be turned OFF manually, for instance, if the remote control is lost or the batteries become totally flat, the control valve must be accessed and the switch flipped to OFF (marked “0”).

The picture below shows the control valve.

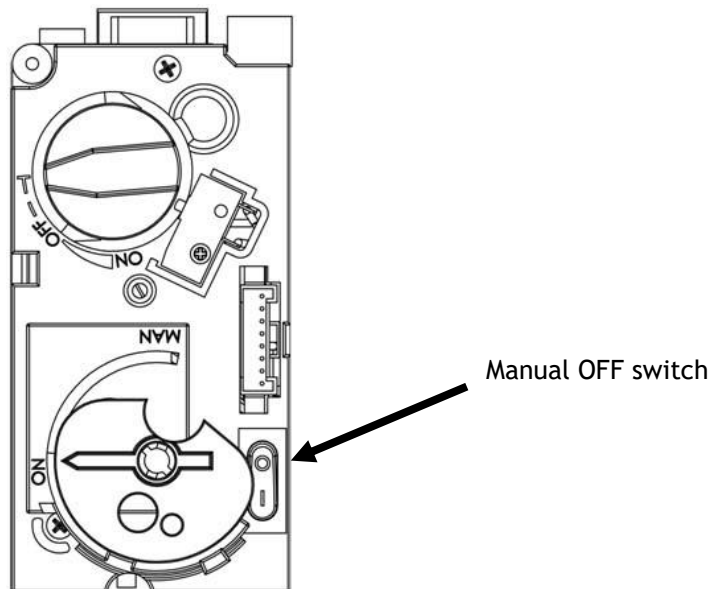

The control valve is located behind the control hatch in the Base of the appliance.

2.5 Cleaning and Maintenance

This appliance should be inspected and serviced once a year by a qualified, competent and registered person. The inspection and maintenance must at least ensure that the appliance is working correctly and safely. It is advisable to clean the appliance of any dust and debris before regularly during the heating season and especially if the appliance has not been used for some time. This can be done with a soft brush and a vacuum cleaner or a damp cloth and if required a non-abrasive cleaning agent. Do not use corrosive or abrasive substances to clean the appliance.

3 INSTALLATION INSTRUCTIONS.

Before commencing Installation, confirm that the details on the appliance data plate correspond to the local distribution conditions, gas type and pressure to which the appliance is to be installed.

Ensure that gas supply and supply pipe is capable of delivering the required volume and pressure of gas and is in accordance with the rules in force.

3.1 Gas Connection

This appliance has a gas inlet connection of Ø 8mm.

3.2 Ventilation

This appliance is a Balanced Flue room sealed appliance, and as such needs no additional ventilation. However an adequate supply of fresh air to maintain temperatures and a comfortable environment is recommended.

This appliance may be installed in a completely sealed or mechanically ventilated house.

3.3 Appliance Fireplace Installation

Determine the position required for the appliance.

Create a gas connection for the appliance in approximately the correct location for the gas controls.

The gas controls are connected to the Burner of the appliance.

For clearance details see section 3.3.1. below.

The clearance distance of the Flue from combustibles must not be less than 75mm. This dimension can be reduced to 25mm as the distance from the underside and the sides of Horizontal Flue runs.

The stove must stand on a fireproof hearth, which must be of a non-combustible material with a minimum thickness of 12mm and extend 100mm in front of the stove.

The hearth must not be capable of inadvertent covering by a rug or carpet. This may be achieved by either the hearth being 50mm above the level of the floor, or a fender or kerb around the hearth to a height of 50mm.

3.3.1 Clearance requirements

The appliance must not be fitted against a rear wall constructed from a combustible material; a gap of 300 mm should be given around the stove before combustible materials may be used in the wall construction.

If the appliance has to be located in an opening, the minimum clearance from non-combustible materials is:

To Rear : 50 mm

To Right : 50 mm

To Left : 50 mm

The stove must be located at least 280mm from any combustible materials.

A combustible shelf may be fitted over the appliance, if in the case of a 150mm or less deep shelf, there is at least 280mm clearance above the top of the stove. The shelf depth may increase at the same rate as the increase in clearance; i.e. a shelf depth of 200mm would require a clearance of 330mm.

3.4 Flue Connection

3.4.1 General notes

This appliance may be installed with a roof terminal (C31) or a wall terminal (C11).

This appliance may only be used with Balanced Flue (otherwise known as Concentric Flue) parts as specified by Saey. The Saey specified flue parts have been approved with the appliance. If the appliance is installed on non-Saey approved parts, Saey cannot guarantee or accept any responsibility for the proper and safe working of the appliance.

Approved Flue Systems are listed on Page 4.

The flue system must be constructed from the appliance upwards, with all joints being fully locked and sealed using the Saey specified parts.

3.4.2 Timber Frame Construction

Whilst it is possible to install room-sealed appliances in timber frame properties, great care needs to be taken to ensure that the flue assembly does not interfere with the weather proofing qualities of any outer wall which it may penetrate. Before attempting this work, further details need to be referenced, (e.g. "Gas Installations in Timber Frame Buildings" from the GAS SAFE installer series in the UK).

3.4.3 Carport or Building Extension

Where a flue terminal is sited within a carport or building extension, it should have at least two completely open and unobstructed sides. The distance between the lowest part of the roof and the top of the terminal should be at least 600mm.

Note: A covered passageway should not be treated as a carport. Flues should not be sited in a covered passageway between properties.


3.4.4 Basements, Lightwells and Retaining walls

Flue terminals should not be sited within the confines of a basement area, light well or external space formed by a retaining wall, unless steps are taken to ensure the products of combustion can disperse safely at all times. It may be possible to install this Balanced Flue system in such a location provided that it is not sited lower than 1m from the top level of that area to allow combustion products to disperse safely.

Flue terminals should be sited to ensure total clearance of the combustion products in accordance with the included information.

When the products of combustion are discharged, they should not cause a nuisance to adjoining or adjacent properties and they should be positioned so that damage cannot occur to other parts of the building. If the outer wall surface is constructed of combustible material, a non-combustible plate should be fitted behind the terminal projecting 25mm beyond the external edges of the terminal.

3.4.5 Terminal Locations.

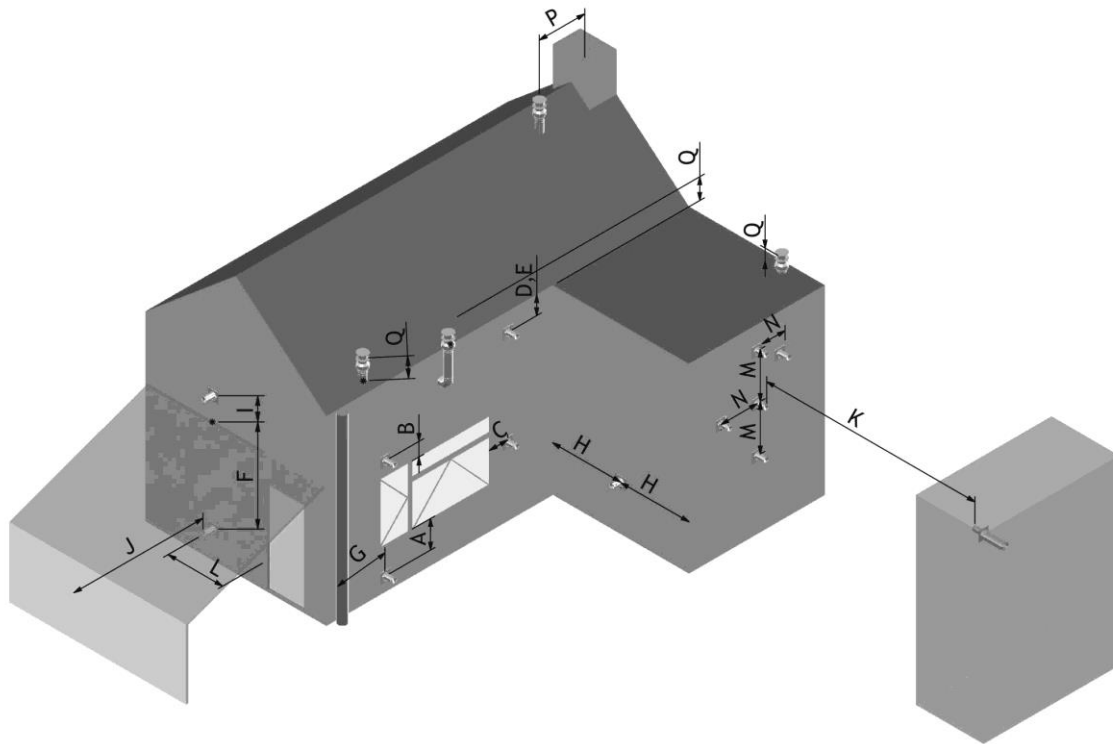

Dimension	Terminal Position	Distance (mm)
A*	Directly below an opening, air brick, opening window etc.	600
B	Above an opening, air brick, opening window etc.	300
C	Adjacent to an opening, air brick, opening window etc.	400
D	Below gutters, soil pipes or drain pipes	300
E	Below eaves	300
F	Below balconies of car port roof	600
G	From a vertical drain pipe or soil pipe	300
H	From an internal or external corner	600
I	Above ground roof or balcony level	300
J	From a surface facing the terminal	600
K	From a terminal facing the terminal	600
L	From an opening in the car port (e.g. door , window into the dwelling)	1200
M	Vertically from a terminal on the same wall	1500
N	Horizontally from a terminal on the same wall	300
P	From a vertical structure on the roof	600
Q	Above intersection with roof	150

* In addition, the terminal should not be nearer than 300mm to an opening in the building fabric formed for the purpose of accommodating a built in element such as a window frame.

3.4.6 Horizontal Wall Vent Termination type C₁₁

Flue sizing:

PEAK: Ø100/150 Connector on Appliance.

Ø100/150 Maybe used Throughout, Alternatively,

Ø130/200 Expander may be used, so that Ø130/200 flue can be used thereafter.

Flue Terminal: Ø130/200

Ø100/150

Maximum pipe extension, for outside wall (H)

= 4 X Vertical Pipe Rise (V) -1. For Ø130/200 flue.

= 2 X Vertical Pipe Rise (V) . For Ø100/150 flue.

Maximum Permissible run (H) =15m.

Vertical Flue Rise (V) metres	Max. Horizontal Flue Run, (H) m for Ø130/200 flue	Max. Horizontal Flue Run, (H) m for Ø100/150 flue
0.5	1	1
1	3	2
1.5	5	3
2	7	4
2.5	9	5
3	11	6
3.5	13	7
4	15	8
4.5	15	9
5	15	10
5.5	15	11
6.5	15	13
7	15	14
7.5 and over	15	15

Minimum Vertical Flue Height: PEAK - 0.5m

Flue Restrictors to be fitted, Ø100/150:

	Peak
Vertical Rise < 1m	No Restrictor
Vertical Rise 1-2m	35mm Restrictor
Vertical Rise > 2m	50mm Restrictor

3.4.7 Vertical Roof Vent Termination C₃₁

Flue sizing:

PEAK: Ø100/150 Connector on Appliance.

Ø100/150 Maybe used Throughout, Alternatively,

Ø130/200 Expander may be used, so that Ø130/200 flue can be used thereafter.

Flue Terminal: Ø130/200


Ø100/150


Minimum Vertical Flue Height: PEAK - 0.5m

Flue Restrictors to be fitted, Ø100/150:

	PEAK
Vertical Rise < 1m	No Restrictor
Vertical Rise 1-2m	35mm Restrictor
Vertical Rise > 2m	50mm Restrictor



Flue Parts

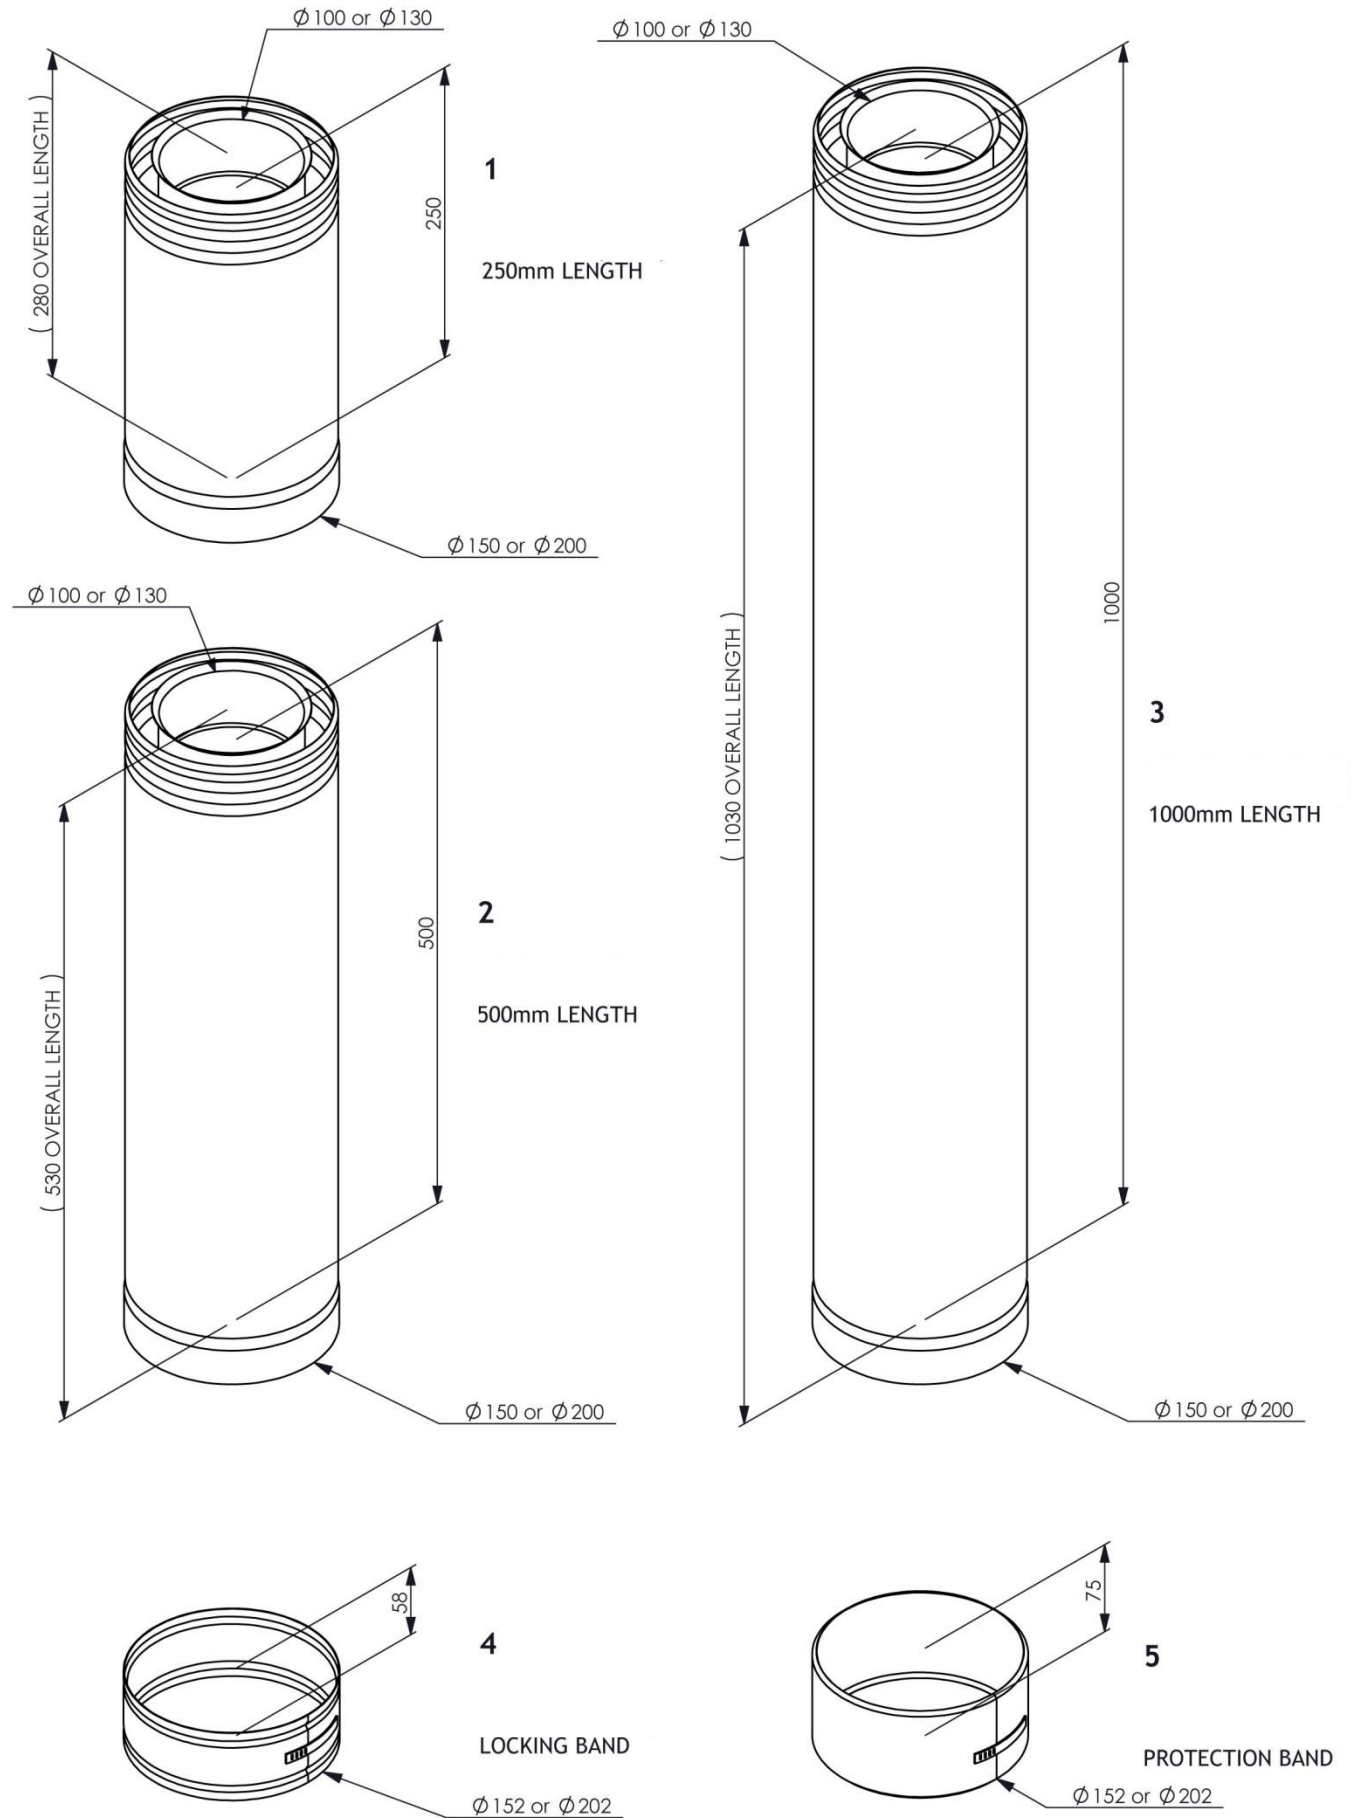

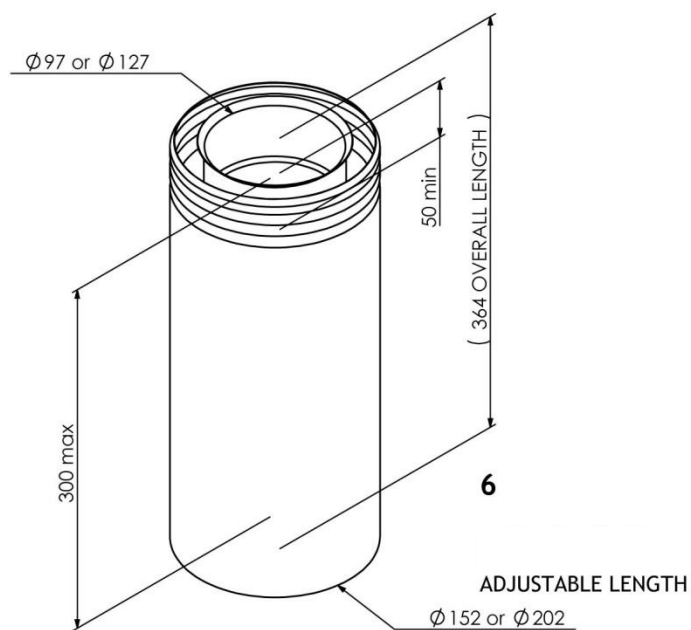


7


VERTICAL TERMINAL
(+ USB)

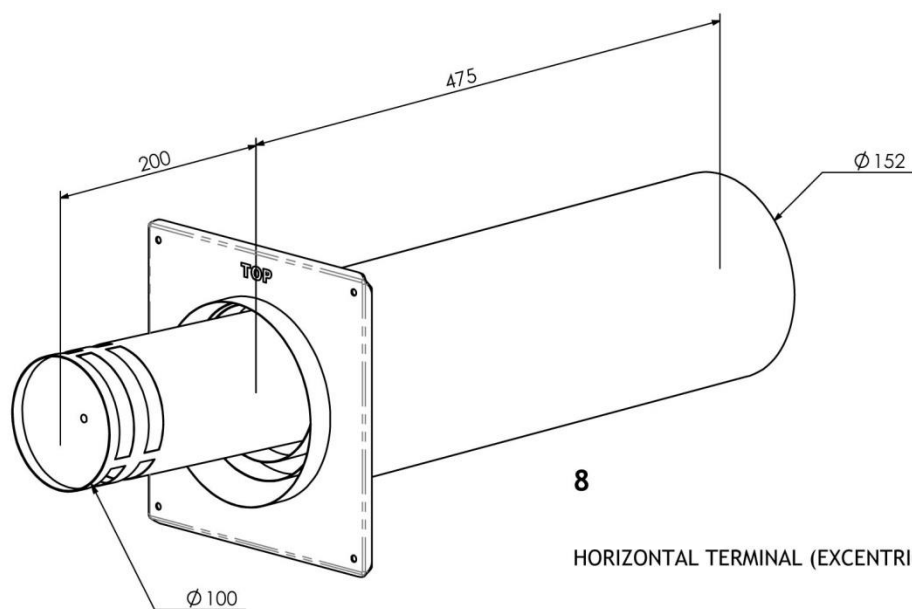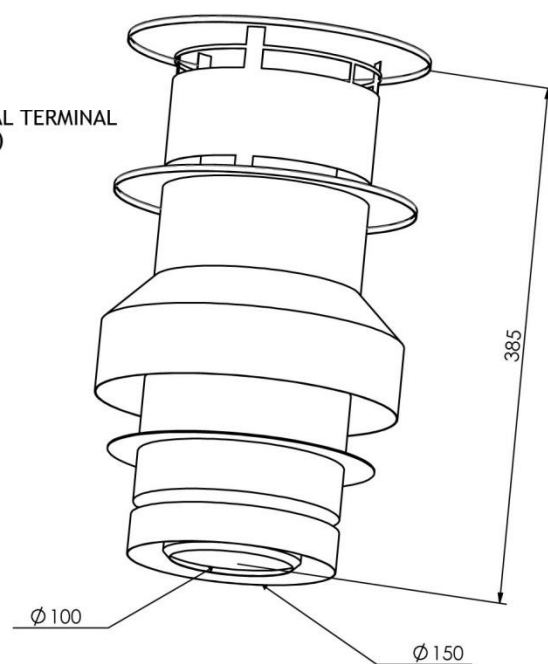







HORIZONTAL TERMINAL (EXCENTRIC EXIT)

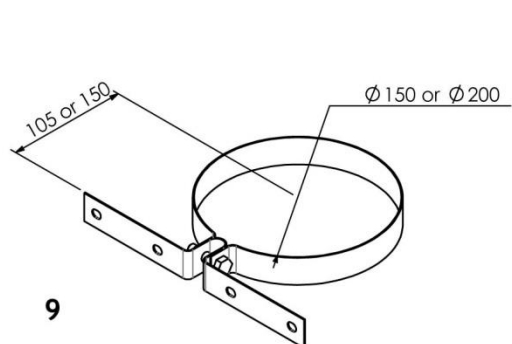


MOUNTING BAND

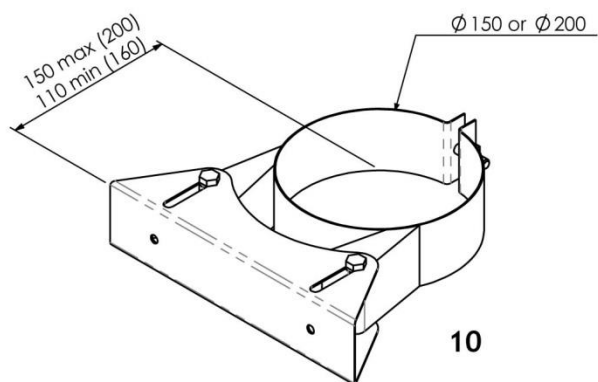


WALL BAND ADJUSTABLE

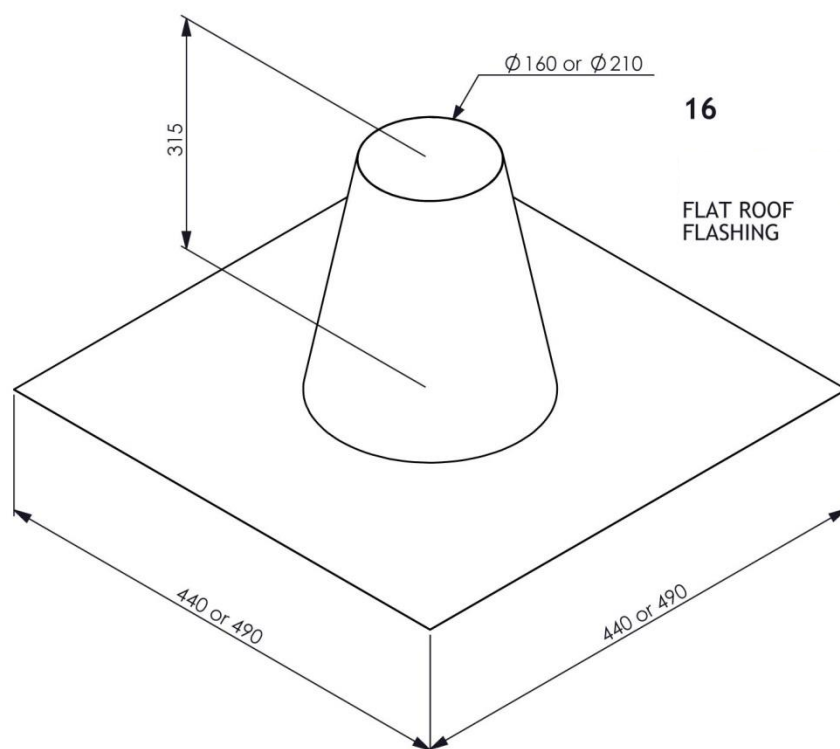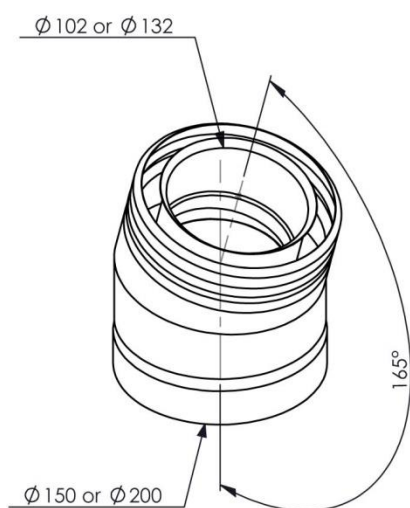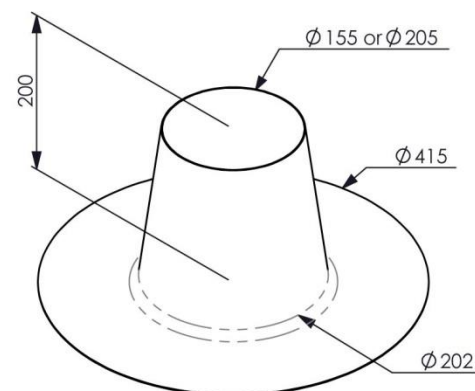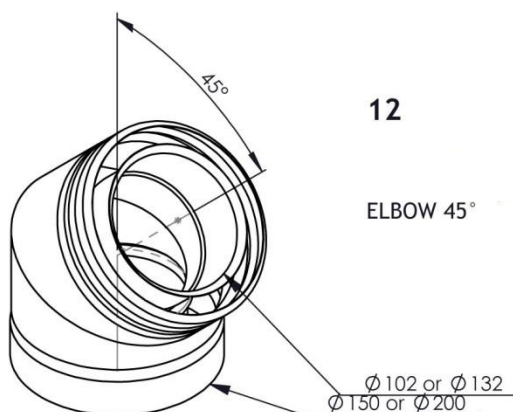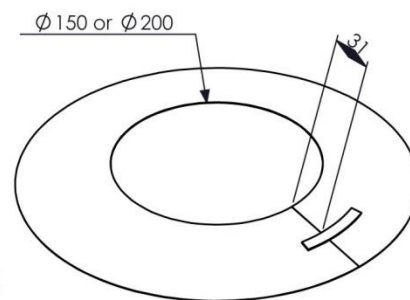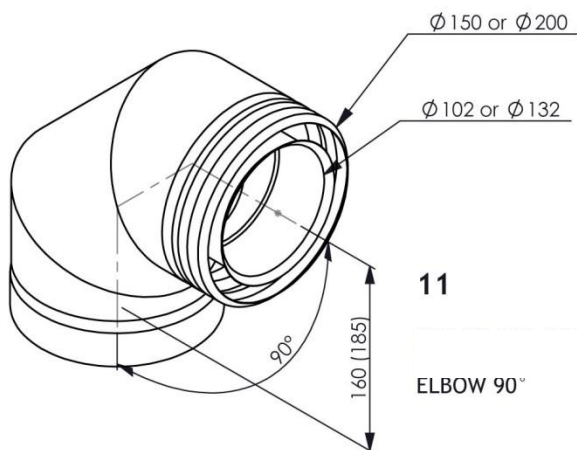

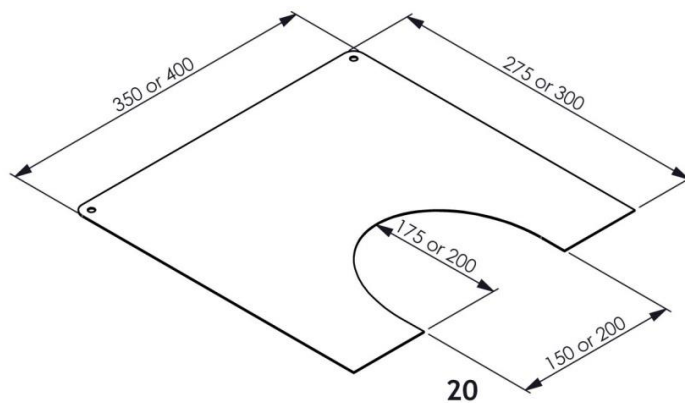


USCP 100 (Ø100)
U:
AL
(SUPPLIED AS A PAIR)

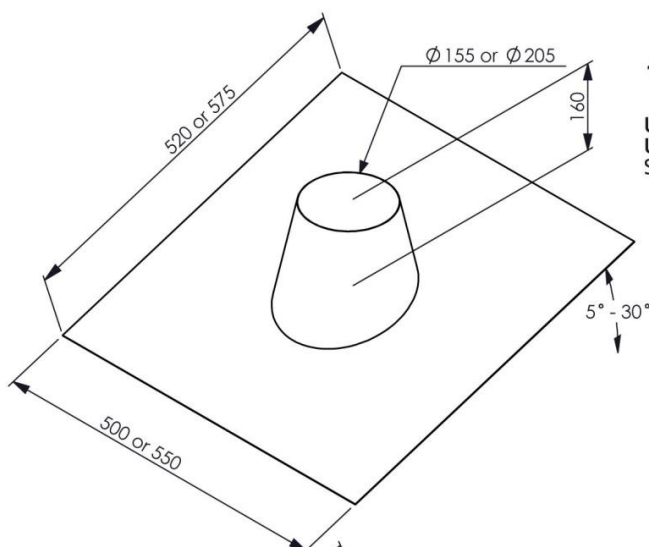

18


USDH 100 (Ø100)
U:
SL

5° - 30°

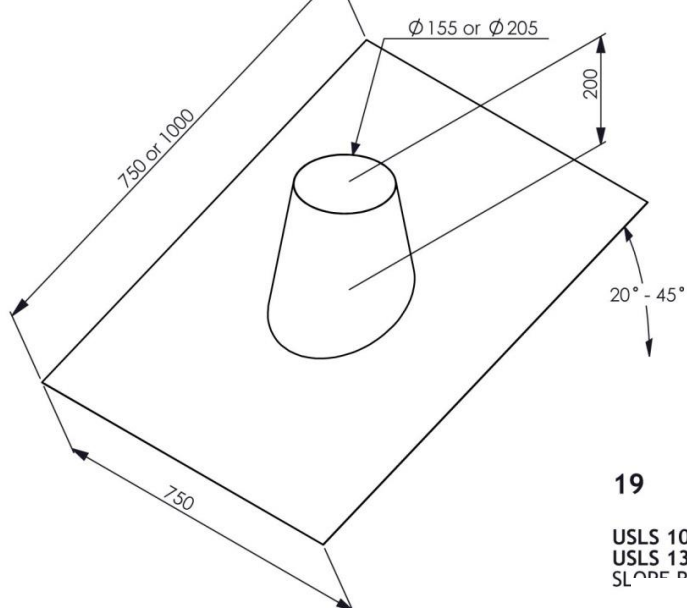

19


USLS 100 (Ø100)
USLS 130 (Ø130)
SLOPE BOARD PLACING 20° - 45°

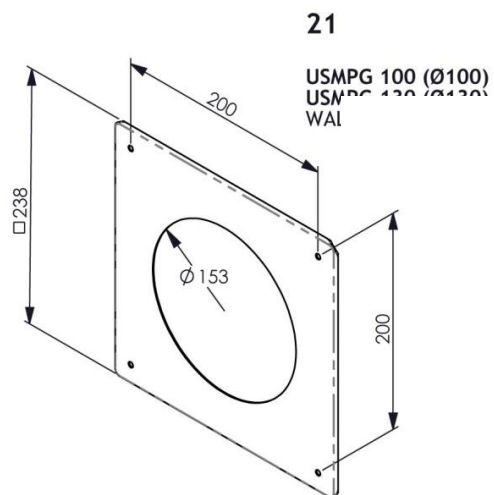


21

USMPG 100 (Ø100)
USMPG 130 (Ø130)
WAL


Vertical Roof Termination

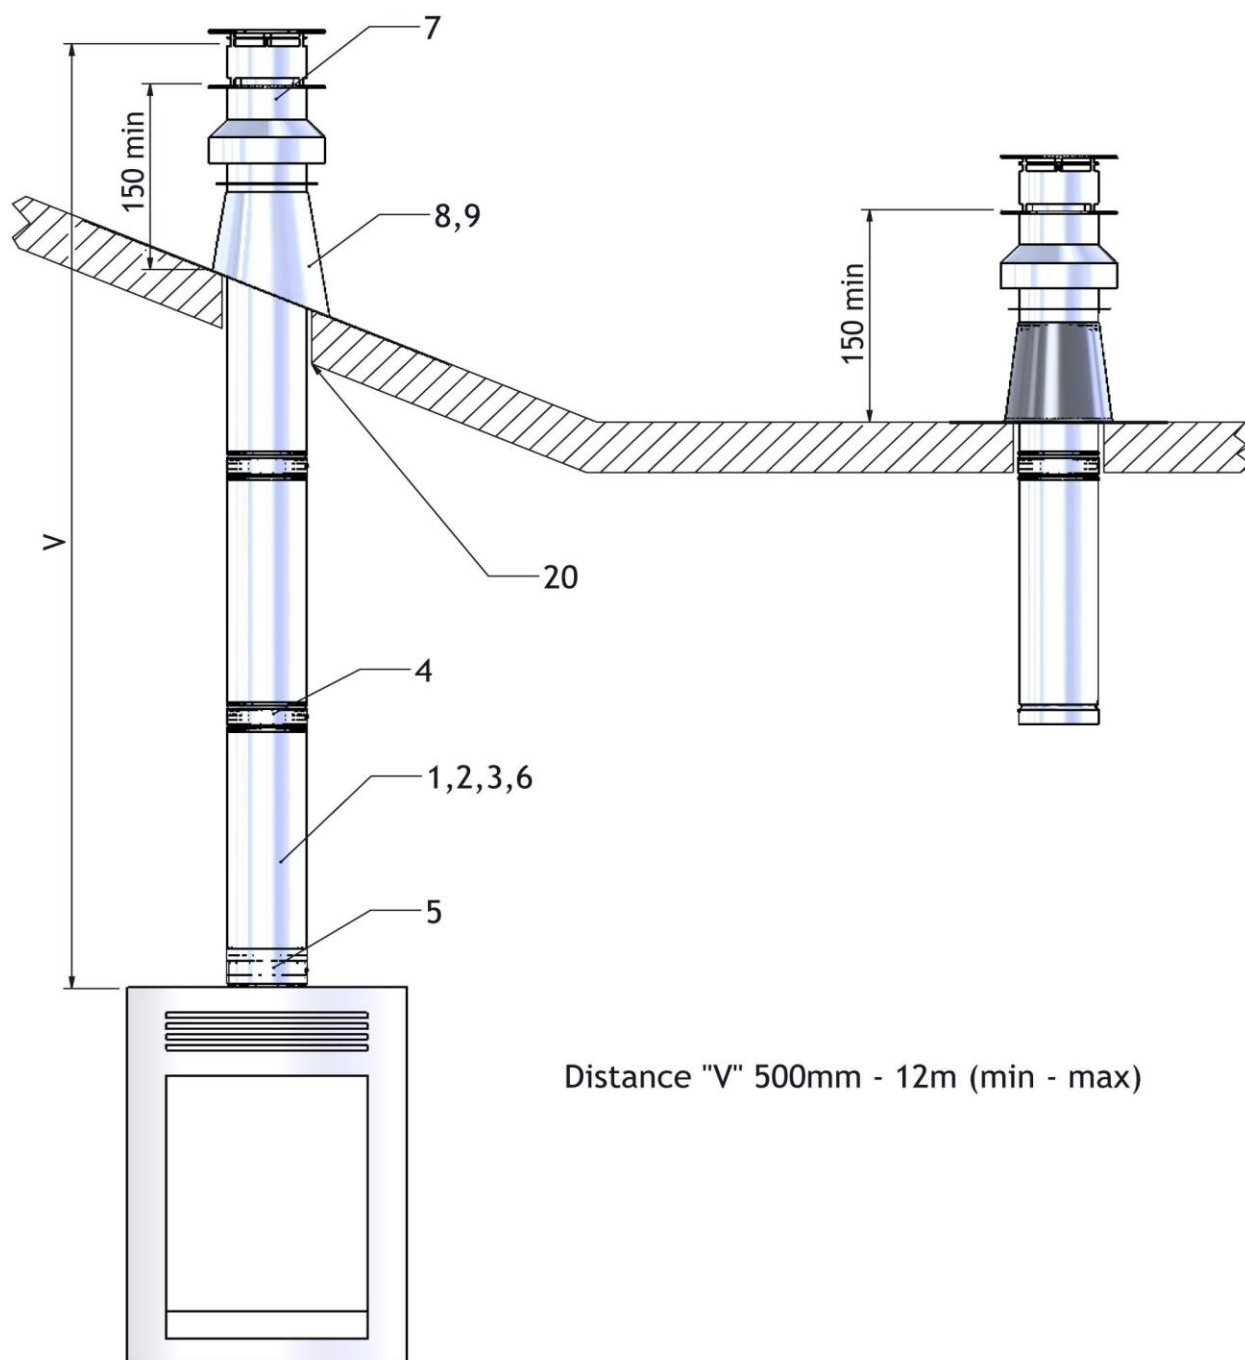


Vertical Roof Termination

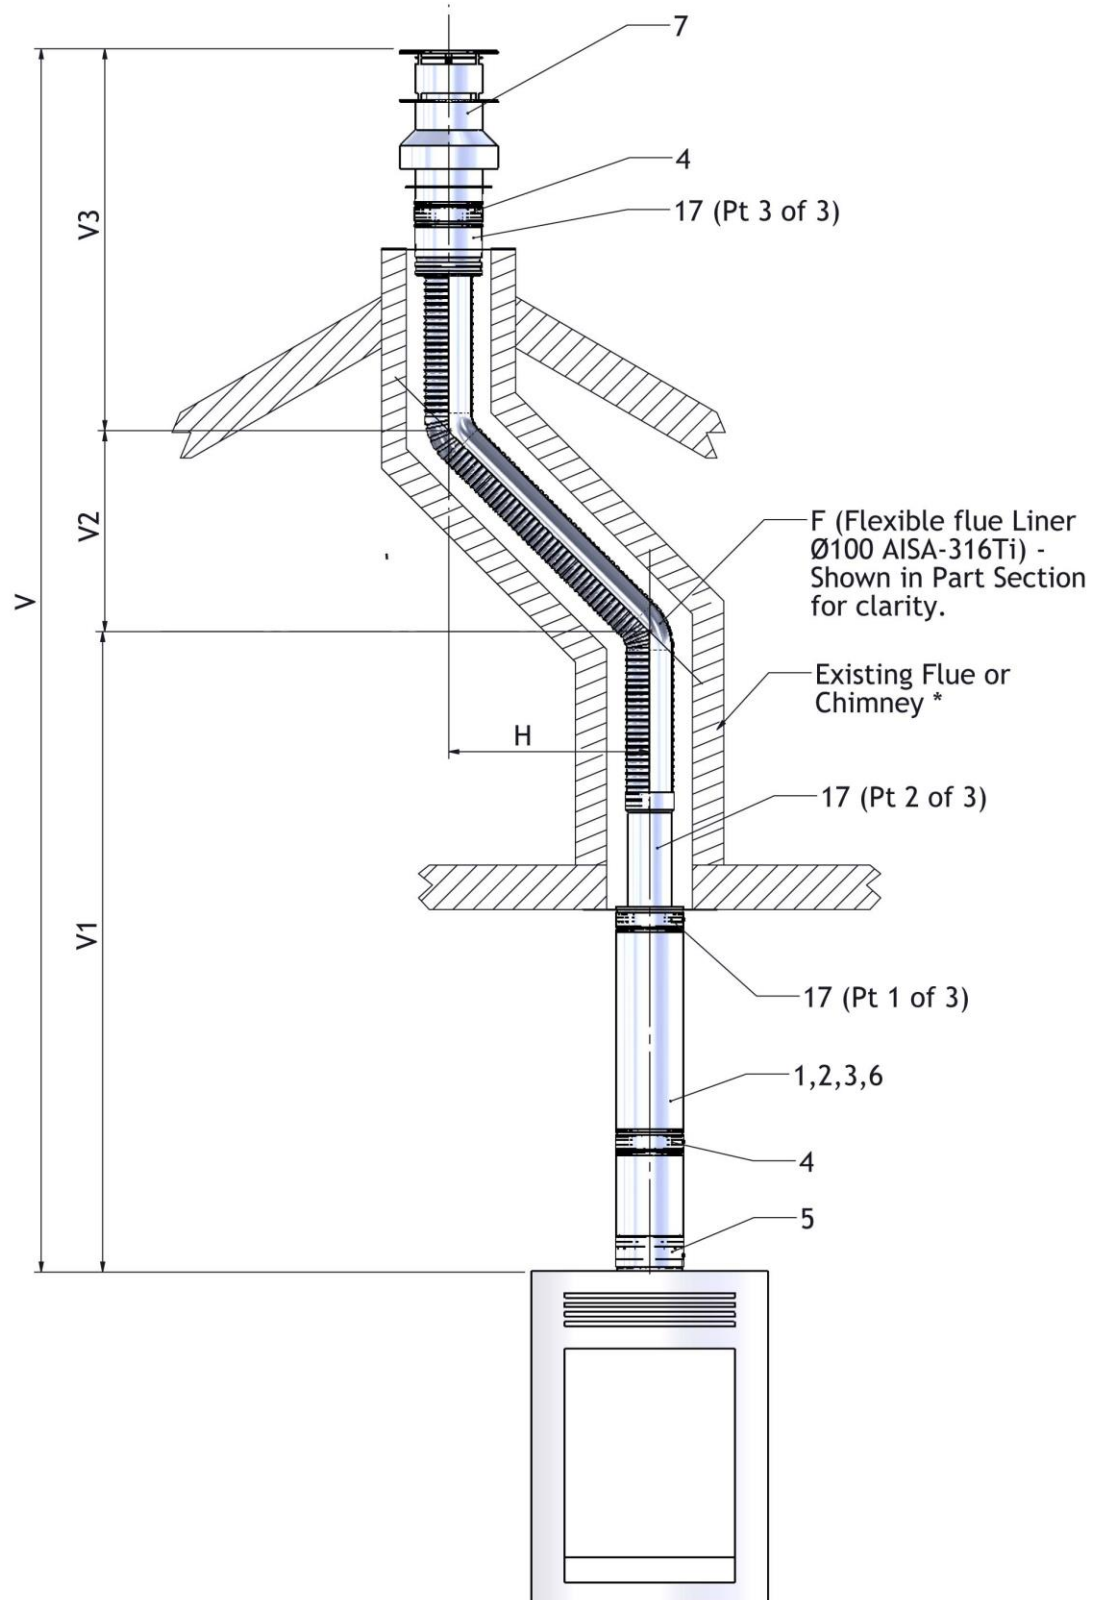


Vertical Roof Termination on angle

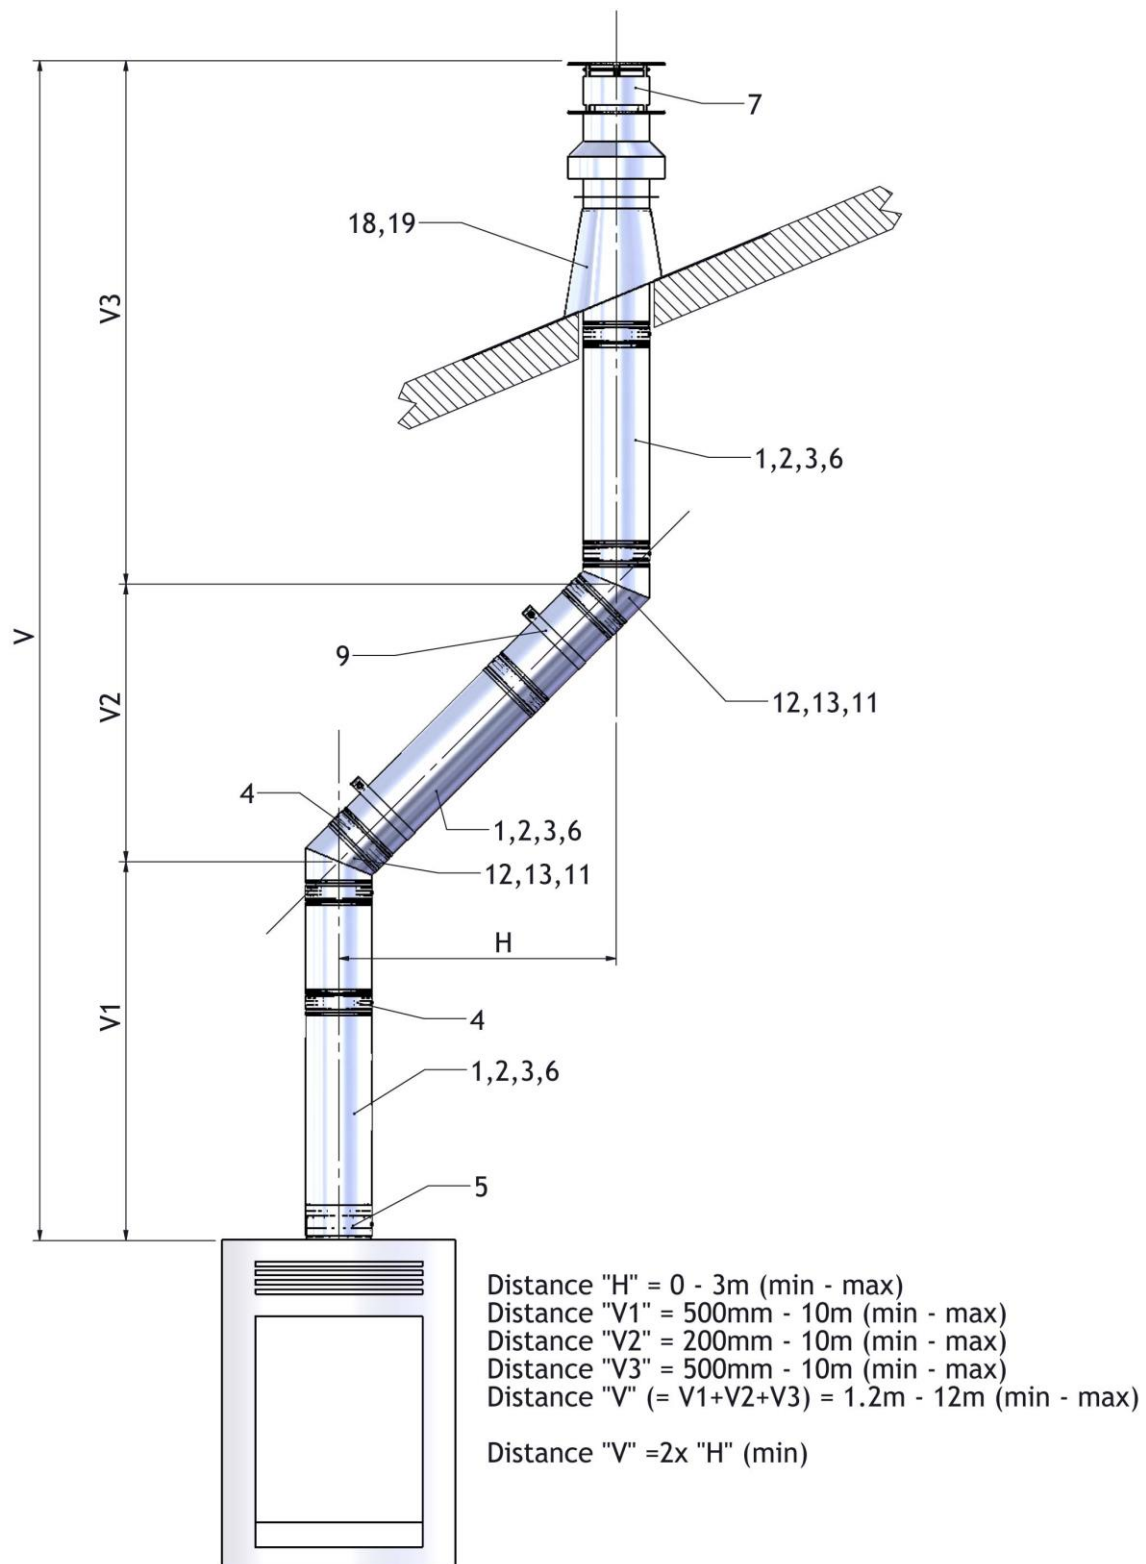


Vertical Roof Termination with bends

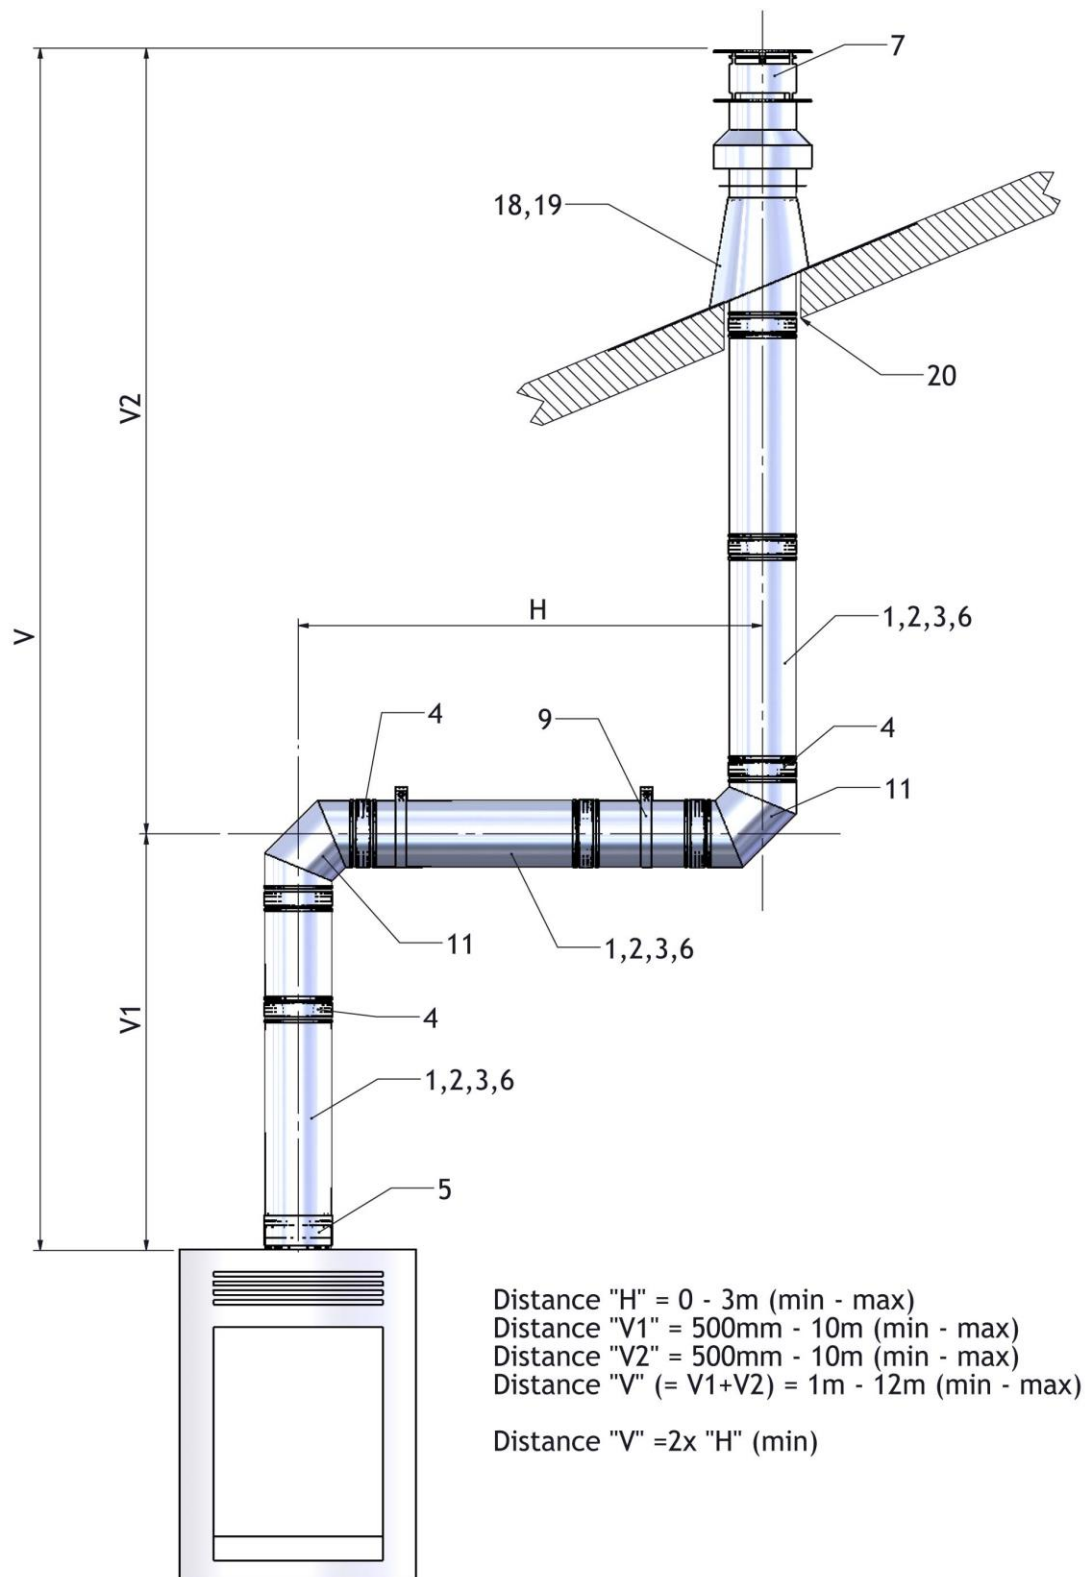

Existing Chimney (Renovation Kit).

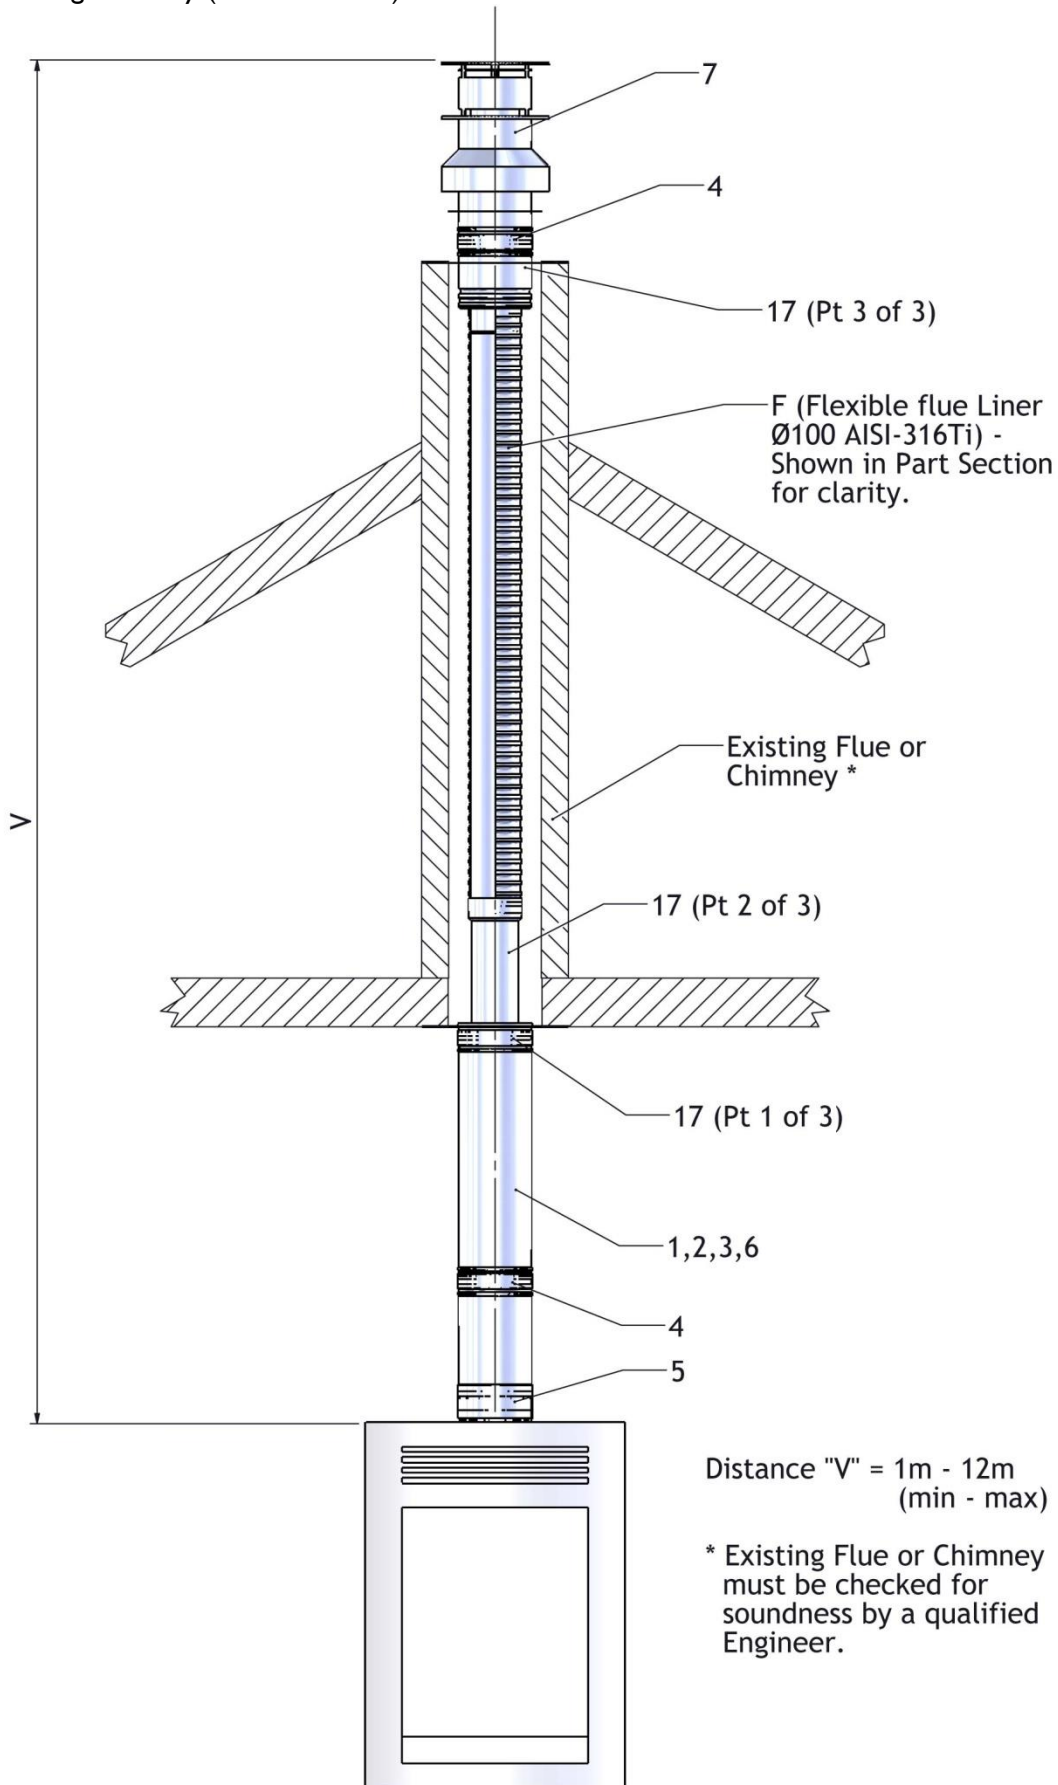

Existing Chimney with Bend(Renevation Kit).

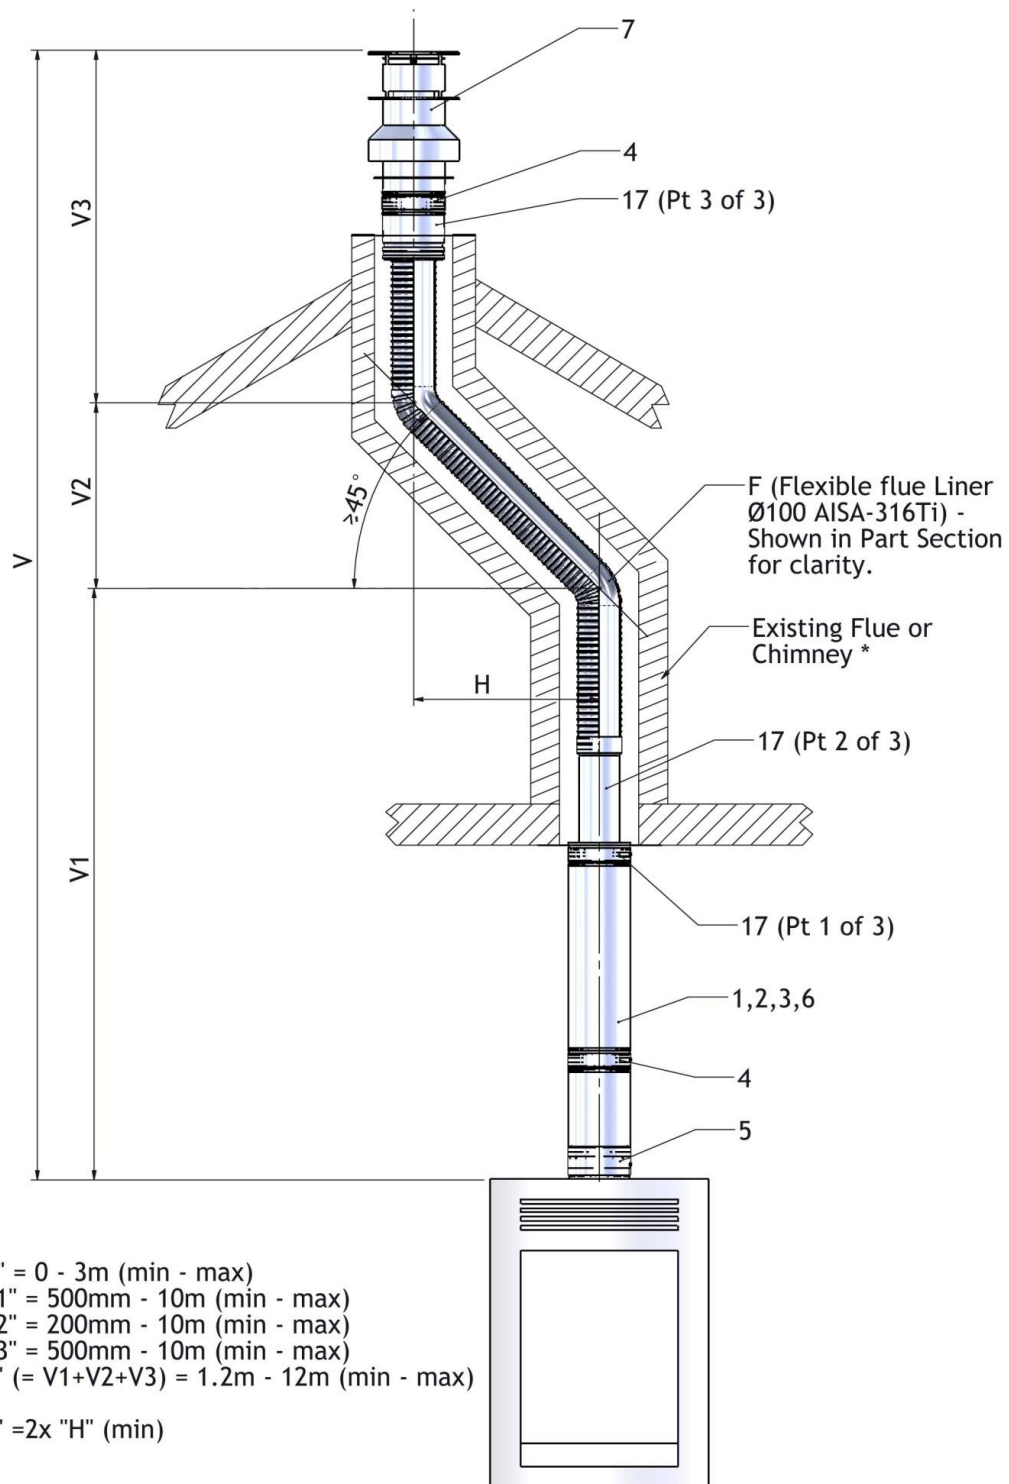


3.5 Fuel Bed Arrangements

When arranging the Media into the Firebed, it is important that the Pilot area is kept clear and that no Media enters the Pilot shield. The Pilot area includes the the pilot shield and the top of the burner to the first slot.

When comissioning or servicing the Appliance Cross Lighting must be checked to ensure smooth lighting of the main burner from the Pilot Flame and smooth lighting of the effect burners from the main Burner.

Fuel arrangements shown below are for the Double burner, featuring the 2nd Thermocouple. Ensure that when fitting the fuel beds, the 2nd thermocouple remains clear of the Fuel Bed media, as shown in the diagrams.

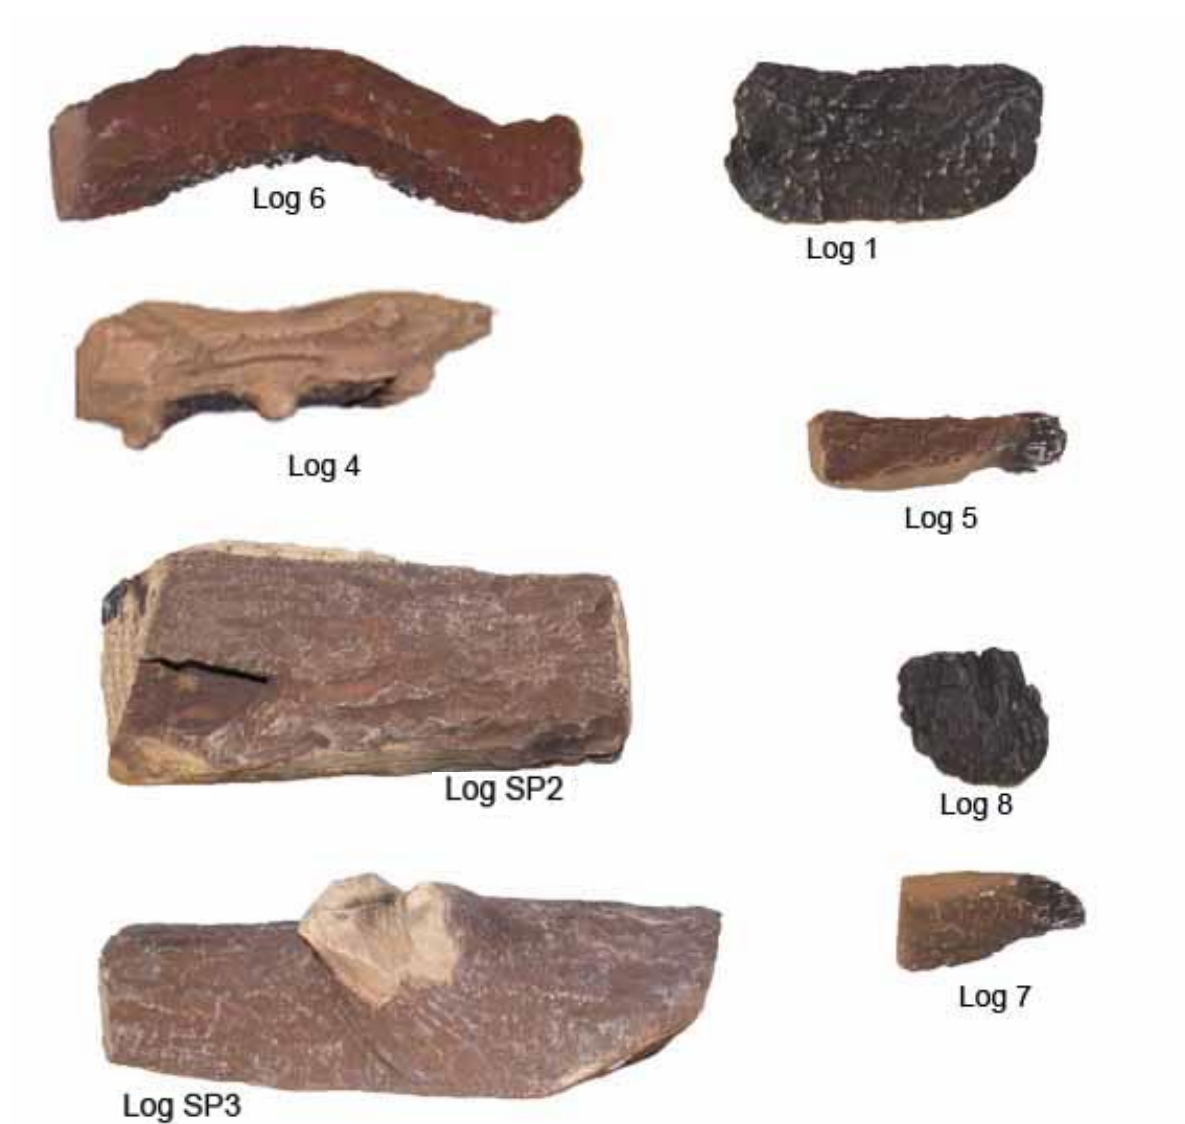

Log Lay



Scatter the Bags of Embers over the top of the burners as shown, keeping the pilot area clear.

Position the 8 logs as shown, noting the 2 special logs labelled SP2 and SP3. These have a slot cast into the underside, this slot fits on top of the 2 elevated burner sections.

If desired, lay the glow strands amongst the logs in the flames to create an enhanced Glow.



Log 1

Position Log 1 under the Left Hand Elevated Burner, behind the Lower burner but clearly to the left of the 2nd Thermocouple.



Log SP2

Position Log SP2 on top of the Left Hand Elevated Burner. It should locate by the slot under the Log sitting on the Elevated Burner.

Log SP3

Position Log SP3 on top of the Right Hand Elevated Burner. It should locate by the slot under the Log sitting on the Elevated Burner.



Log 4

Position Logs 4 so that it sits on top of Log 1 at the rear and lie forward, crossing the Front burner to sit on top of the grate behind the Cast Log Bar.



Log 5

Position Logs 5 so that it sits on top of Log 1 at the rear and lie forward, crossing the Front burner to sit on top of the grate behind the Cast Log Bar.





Log 6

Position Log 6 so that the Top of the Log sits above Logs SP2 & SP3 with the other end resting in front of the Front Burner and Pilot Shield, behind the Cast Log Bar.



Log 7

Position Log 7 to the left of the Front Burner, sitting flat on the Grate.



Log 8

Position Log 8 to the right of the Front Burner, sitting flat on the Grate..

3.6 Commissioning the Appliance

3.6.1 Pilot Ignition Check

1. Ignite the pilot light as described in the User Instructions
2. Check that the pilot flame stays alight
3. Extinguish the pilot light

3.6.2 Main Burner Check

1. Ignite the pilot light as described in the User Instructions
2. Turn on the main burner as described in the User Instructions
3. Check that the pilot smoothly cross-lights to the main burner and that the main burner and pilot stay alight
4. Check the operation of the "effect" burners as described in the User Instructions
5. Extinguish the appliance fully

3.6.3 Pressure Check

The appliance is preset to give the correct heat inputs as listed in the technical details. No further adjustment is necessary. Always check the inlet pressure and burner pressure.

1. Turn off the gas valve on the appliance
2. Release the screw on the Inlet Pressure test point on the gas valve and connect a manometer
3. Check that the measured pressure is as the prescribed supply pressure
4. Perform the test when the appliance is burning on full (inc. "effect" burners) and with only the pilot alight
5. If the pressure is low, check the gas supply pipes are too a correct sizing
6. If the pressure is too high (more than 5 mbar over) the appliance may be installed, but the gas supply company should be contacted
7. Release the screw on the Burner Pressure test point on the gas valve and connect a manometer
8. Check that the measured pressure is as detailed in the Technical details
9. The measured value should be within +/- 10% of the described value. If this is not the case, please contact the supplier.

Note: After checking the pressures and removing the manometers, the screws in the Pressure Test points must be closed, and the system must be checked for gas-tightness.

4 SERVICING

Turn the appliance OFF and isolate the gas supply. Ensure the appliance is fully cold before attempting to start servicing the appliance. No liability can be accepted by Saey for injury caused by burning or scolding by a hot appliance.

A suggested procedure for servicing is listed below.

- A. Lay out dust sheet on flooring, mask off any special fireplace materials.
- B. Remove the door Lock.
- C. Open the Front Door Assembly.
- D. Carefully remove the Ceramic components (including Embers).
- E. Use a Vacuum cleaner to clean the top of the burners and grate
- F. Remove Grate
- G. Using a vacuum cleaner, fully clean the Burner.
- H. Use the vacuum cleaner and a soft brush to clean the pilot assembly and Injectors. Never modify or bend the Thermocouple
- I. Turn on the gas supply and check for leaks, check the burners and Pilot for good condition and operation
- J. Replace Grate
- K. Replace the Firebed arrangements
- L. Replace Window Assembly and Frame
- M. Check the flue system and terminal, making sure that the terminal vent is fully clear
- N. Light the appliance and test setting pressures
- O. Check the safe operation of the appliance.

4.1 Cleaning the Ceramics

Remove the ceramics as detailed in A - D above.

Gently clean the ceramics in the open air, using a soft brush and a vacuum cleaner. Where necessary replace damaged components only with genuine Saey specified parts. Seal any scrap ceramics in plastic bags and dispose at proper refuse sites. When using a vacuum cleaner, it is recommended that one with a HEPA filtering system is used.

Re-fit the Firebed arrangement, re-seal the appliance and check the safe operation of the appliance.

4.2 Servicing the Burners

Remove the Ceramics as detailed in A - D above.

The pilot is now clearly visible, the pilot, including the Thermocouple, can be replaced/serviced by removing Saeying the pilot assembly from its mounting. This is done by removing the two screws on the surface of the pilot. The fittings on the under-side of the pilot can be un-done using a 10mm spanner where appropriate.

To access the Main Burner Injectors, the Burner base units must be removed. This is done by removing the six bolts (M6, 10mm spanner) holding the burner in. With these six bolts removed, the Burner base can be Saeyed up through the Firebox, and the Injectors can be easily accessed.

When replacing any parts use only original Saey specified parts.

4.3 Spare parts

Item	PEAK
Front Window Panel	6021-00304
Ceramic Log Pack	xxxxxxx
Ember Pack	xxxxxxx
Pilot Assembly Natural	G30-ZP2-312
Pilot Assembly LPG	G30-ZP2-271
Electrode	G30-SPK1
Electrode Lead	G60-ZKIS1/1500
Thermocouple	CG30182
Injector Natural Front (280)	YG46077
Injector Natural Left & Right (240)	EG08077
Injector LPGFront (120)	YG46177
Injector LPG Left & Right (100)	WG04077
Burner Top Assembly Front	SA30092
Burner Elevated Assembly Left	RA10L76
Burner Elevated Assembly Right	SA30R76
Complete Burner Assembly Natural	ST30N07
Complete Burner Assembly LPG	ST30P07
Burner Seal Set	xxxxxxx
Grate Assembly	SA30054
Gas Valve Assembly Natural	xxxxxxx
Gas Valve Assembly LPG	xxxxxxx
Latching Solenoid	GV-S60C/12
Receiver unit	G6R-R4AS
Handset	G6R-H4D

5 TECHNICAL INFORMATION

5.1 Countries of Use

AT -Austria	I _{2H} , G20 at 20 mbar	I _{3P(50)} ,G31 at 50 mbar; I _{3B/P(50)} ,G30/G31 at 50 mbar
BE -Belgium	I _{2E+} , G20/G25 at 20/25 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
BG -Bulgaria	I _{2H} , G20 at 20 mbar	I _{3B/P(30)} ,G30/G31 at 30 mbar
CH - Switzerland	I _{2H} , G20 at 20 mbar	I _{3P(50)} ,G31 at 50 mbar; I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(50)} ,G30/G31 at 50
CY -Cyprus	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
CZ -Czech Republic	I _{2H} , G20 at 20 mbar	I _{3P(50)} ,G31 at 50 mbar; I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(50)} ,G30/G31 at 50
DE -Germany	I _{2ELL} , G25 at 20 mbar ¹ ; I _{2E} , G20 at 20 mbar	I _{3P(50)} ,G31 at 50 mbar; I _{3B/P(50)} ,G30/G31 at 50
DK -Denmark	I _{2H} , G20 at 20 mbar	I _{3B/P(30)} ,G30/G31 at 30 mbar
EE -Estonia	I _{2H} , G20 at 20 mbar	I _{3B/P(30)} ,G30/G31 at 30 mbar
ES -Spain	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar
FI -Finland	I _{2H} , G20 at 20 mbar	I _{3P(30)} ,G31 at 30 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
FR -France	I _{2E+} , G20/G25 at 20/25 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar; I _{3B/P(50)} ,G30/G31 at 50
GB -United Kingdom	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
GR -Greece	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
HU -Hungary		I _{3B/P(30)} ,G30/G31 at 30 mbar
HR -Croatia	I _{2H} , G20 at 20 mbar	I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
IE -Ireland	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar
IS -Iceland		
IT -Italy	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
LT -Lithuania	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
LU -Luxembourg	I _{2E} , G20 at 20 mbar	
LV -Latvia	I _{2H} , G20 at 20 mbar	
MT -Malta		
NL -The Netherlands	I _{2L} , G25 at 25 mbar I _{2EK} , G25.3 at 25 mbar I ₂ (43.46 -45.3 MJ/m ³ (0 °C)), G25.3 at 25 mbar	I _{3B/P(30)} ,G30/G31 at 30 mbar I _{3P(50)} ,G31 at 50 mbar; I _{3P(30)} ,G31 at 30 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
NO -Norway	I _{2H} , G20 at 20 mbar	I _{3B/P(30)} ,G30/G31 at 30 mbar
PL -Poland	I _{2E} , G20 at 20 mbar	I _{3P(37)} ,G31 at 37 mbar
PT -Portugal	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar
RO -Romania	I _{2E} , G20 at 20 mbar	I _{3P(30)} ,G31 at 30 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
SE - Sweden	I _{2H} , G20 at 20 mbar	I _{3B/P(30)} ,G30/G31 at 30 mbar
SL -Slovenia	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar
SK -Slovakia	I _{2H} , G20 at 20 mbar	I _{3P(50)} ,G31 at 50 mbar; I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar; I _{3B/P(50)} ,G30/G31 at 50
TR -Turkey	I _{2H} , G20 at 20 mbar	I ₃₊ ,G31/G31 at 28/37 mbar; I _{3P(37)} ,G31 at 37 mbar; I _{3B/P(30)} ,G30/G31 at 30 mbar

5.2 Technical Data

Product Identification Number : 0359CS2412

Gas type		G20 I2H,I2E	G20/G25 I2E+	G25/G25.3 I2L/ I2EK I2(43.46 -45.3 MJ/m3 (0°C))	G20/G25 I2ELL
Supply Pressure	mbar	20	20 / 25	25	20
Nominal Heat Input Gross (Hs)	kW	11.5	11.5/ 10.5	10.5	9.4
Nominal Heat Input Nett (Hi)	kW	10.4	10.4 / 9.5	9.5	8.5
Consumption	m³/hr	1.070	1.07 / 1.12	1.12	1.07
Burner Pressure (hot)	mbar	18.8	18.8 / 23	23	18.7
Injector Marking		280 Centre, 240 Left, 240 Right			
Pilot		G30-ZP2-312 (31.2 inj)			
Efficiency Class		I			
Nox Class		5			
Type		C11 / C31/ C91			


Gas type		G30/G31 I3B/P(30)	G30/G31 I3+	G31 I3P(50)	G31 I3P(37)	G31 I3P(30)
Supply Pressure	mbar	30	30 / 37	50	37	30
Nominal Heat Input Gross (Hs)	kW	10.5	10.5	10.5	10.5	9.3
Nominal Heat Input Nett (Hi)	kW	9.7	9.7	9.7	9.7	8.6
Consumption	m³/hr	0.284	0.284 / 0.36	0.360	0.360	0.333
Burner Pressure (hot)	mbar	27	27 / 36	36	36	28
Injector Marking		120 Centre, 100 Left, 100 Right				
Pilot		G30-ZP2-271 (27.1 inj)				
Efficiency Class		I				
Nox Class		5				
Type		C11 / C31 / C91				

This product has been tested, and certified for use on Biopropane Gas.


Biopropane Gas can be used as a fuel, with no adjustment necessary if the product is installed as an LPG version.

5.3 Dimensions

5.3.1 Peak Top Flue

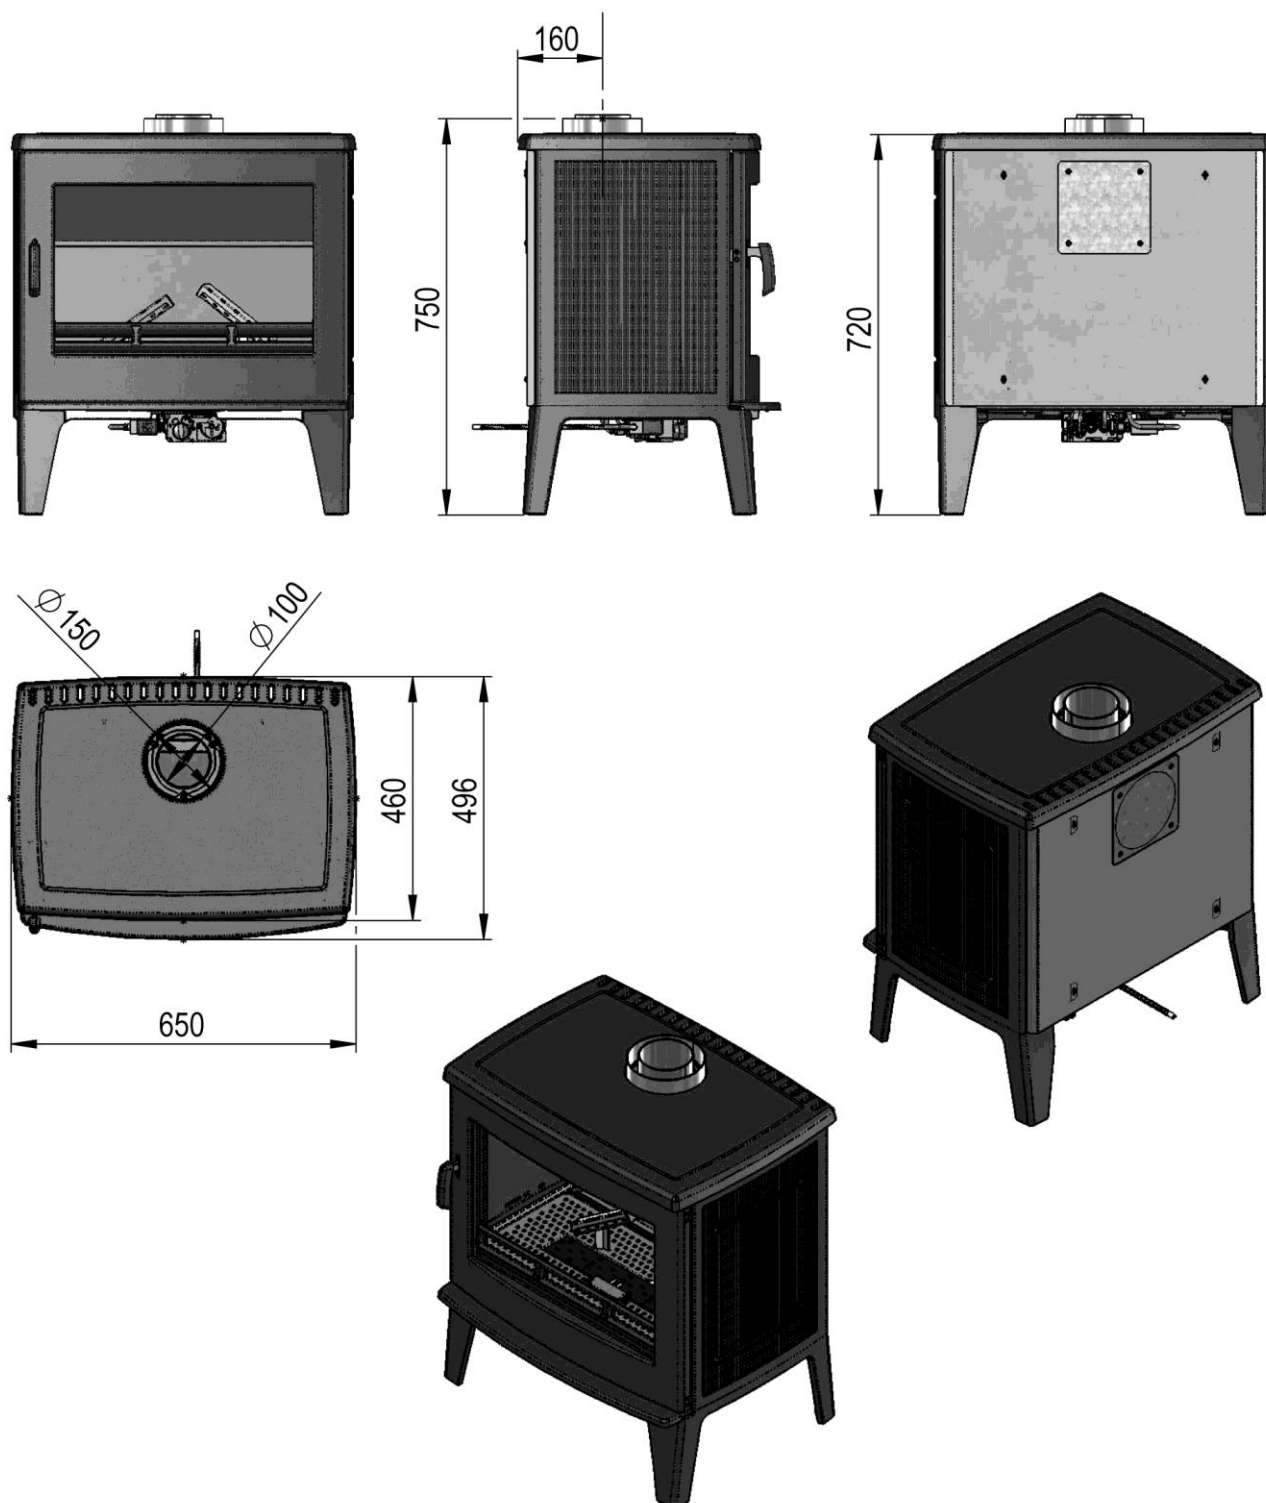

5.3.2 Peak Rear Flue

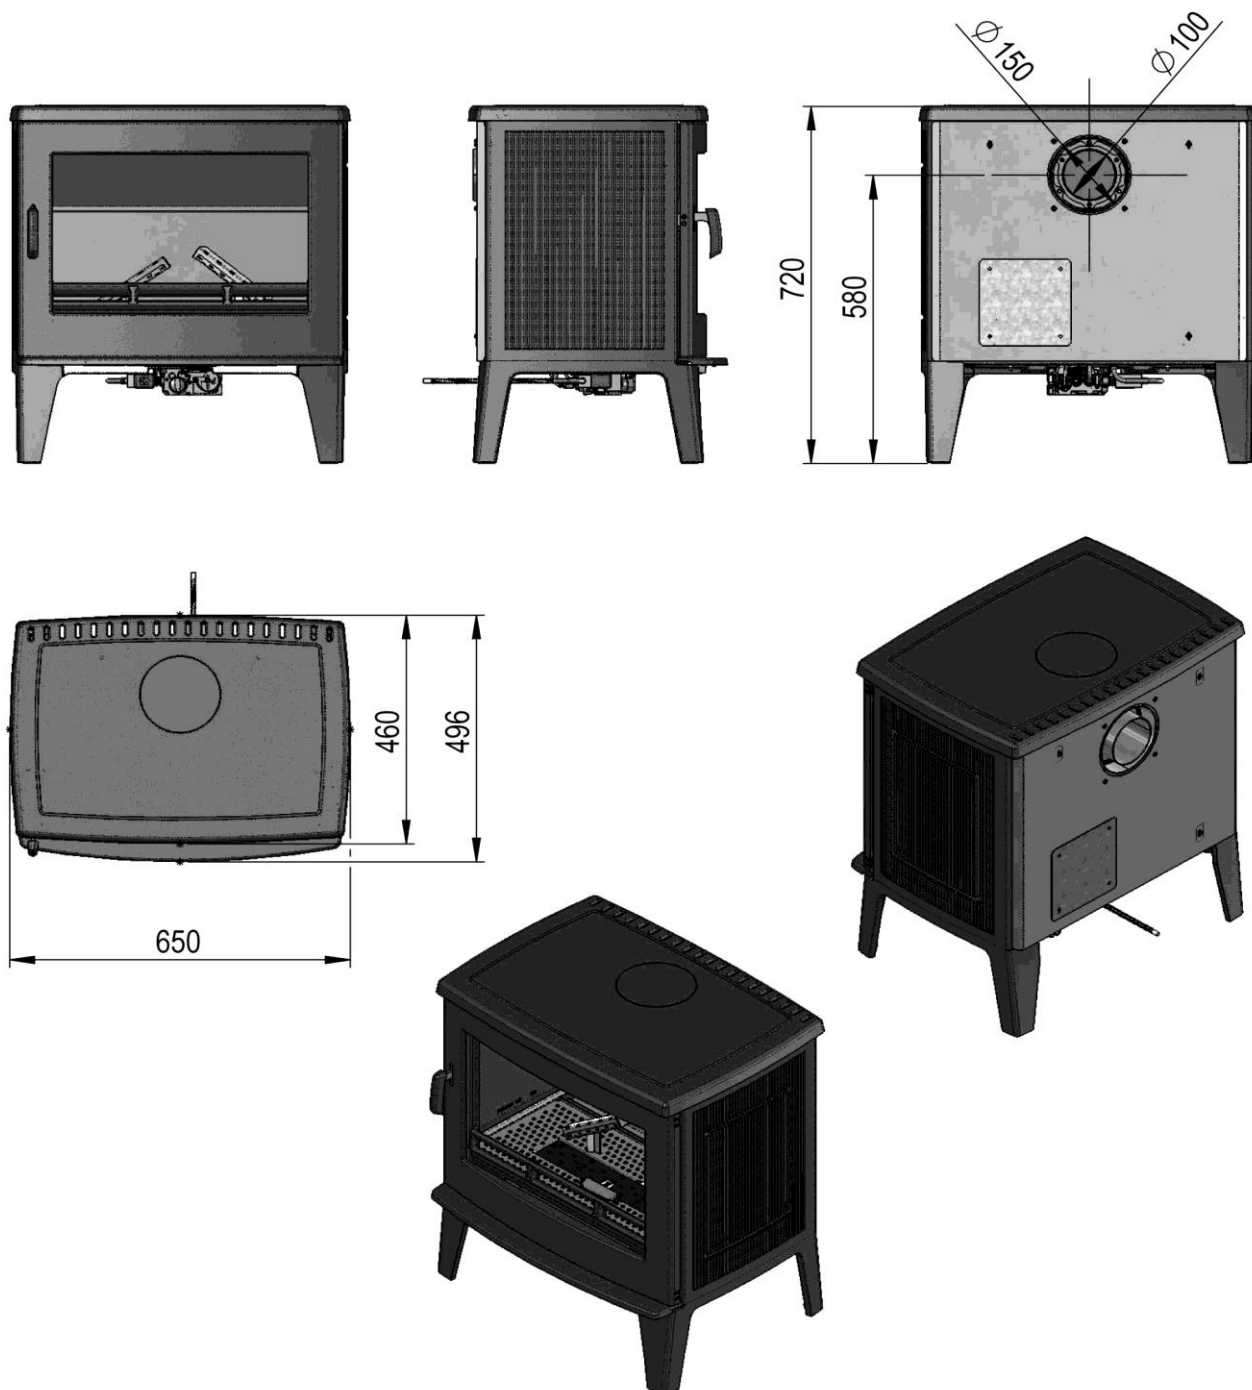

Please contact your installer in case of maintenance or operation problems



Industriepark De Bruwaan 17

9700 Oudenaarde

Belgium

www.belgofire.be

Versie 05 2025